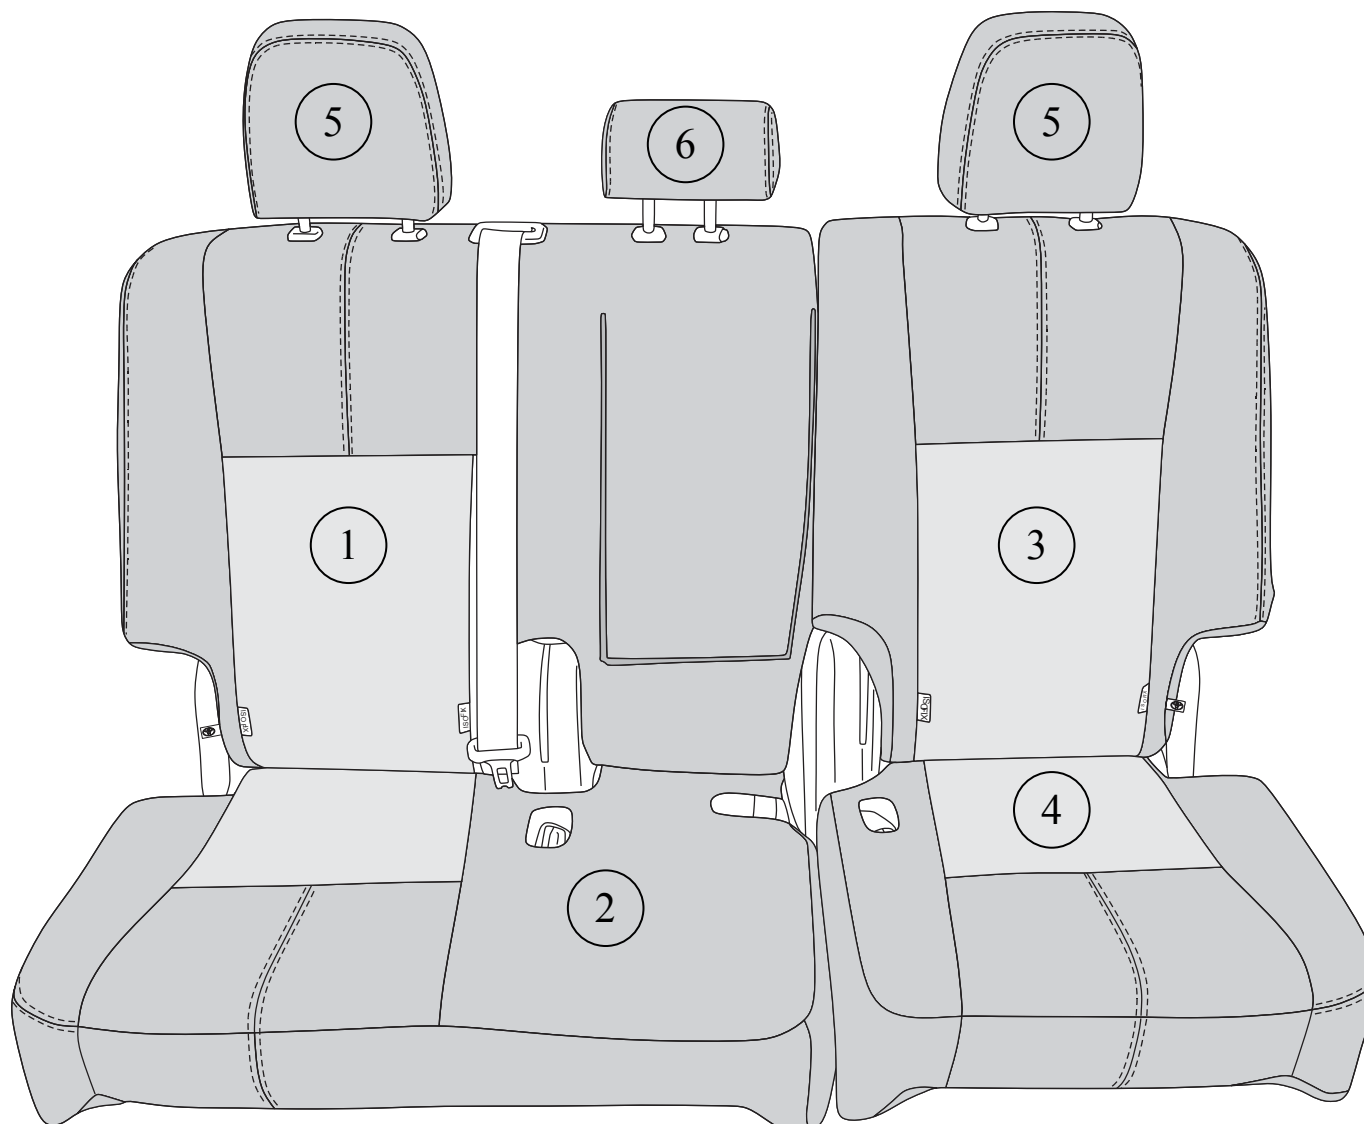


**MID-ROW FABRIC SEAT COVER**
**FITTING INSTRUCTIONS**

**FITTING TIME**  
**30 MINUTES**


Item	Item Name	Qty
1	Backrest Cover RH	1
2	Cushion Cover RH	1
3	Backrest Cover LH	1
4	Cushion Cover LH	1
5	Side Headrest Cover	2
6	Centre Headrest Cover	1

## General Notes

---

- This seat cover suits Toyota Kluger & Highlander **ONLY**.
- Please read these instructions carefully before installation, paying special attention to all Note & Caution notes. Failure to do so may result in damaged parts or injury to the installer or customer.
- Regularly inspect seat cover for wear, damage and seat cover misalignment.
- Adjust alignment if seat cover twists or moves from its original, centrally aligned position.
- Place fitting instructions in the vehicle's glovebox after installation is complete.

## Safety Notes

---

- Check that all work practices comply with safety standards
- Please wear appropriate clothing and use safety equipment



## Warning Notes

---

- Do NOT fit to non-fabric seats.
- Do NOT fit to seats with side seat airbags.
- Install seat covers exactly as described in installation instructions.
- Ensure seatcover remains centrally aligned (not twisted) at all times.
- If seat cover is damaged, **DO NOT** repair. It must be replaced.
- Do not install more than one seatcover on the seat at any given time.

## Care Instructions

---

- When soiled or stained, we recommend Toyota Genuine car seat covers to be hand washed in warm water.
- For stubborn stains, a reputable pre-wash stain remover can be sprayed onto stained area prior to washing.
- Drip dry in shade only.
- Do not tumble dry.
- Please note that covers **must** be re-fitted as per these instructions.

Step 1.

Remove all 3 headrests.

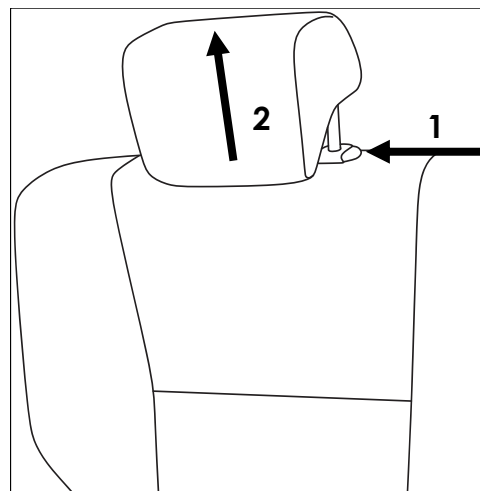



Figure 1.

 <p><b>Important</b></p>	<p>As with all garment type products the threads will give if pulled on too hard. Use just enough force to align and pull the cover without breaking the sewn threads</p>
---	---

Step 2.

**RH Backrest (60%) Cover Installation**

Locate the RH backrest cover. It is the larger of the two backrest covers.  
Pull seat belt forward and feed backrest cover through.  
Guide backrest part of cover over backrest by pulling evenly at each side and keeping the seat cover aligned with the seat at all times.

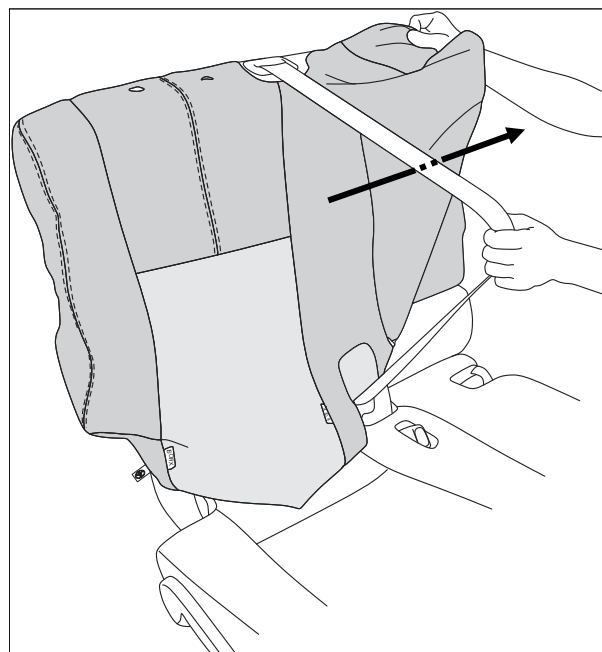



Figure 2.

 <p><b>Note</b></p>	<p>When installing one side, fold other side backrest down and slide the seat forward for better access to the side being installed</p>
--	---

Step 3.

For best and even fitment, work down the sides of the backrest cover evenly to align the backrest cover seam to the seat backrest seam.  
Wrap the outer bottom corner of the backrest cover around the bottom corner of the seat backrest.

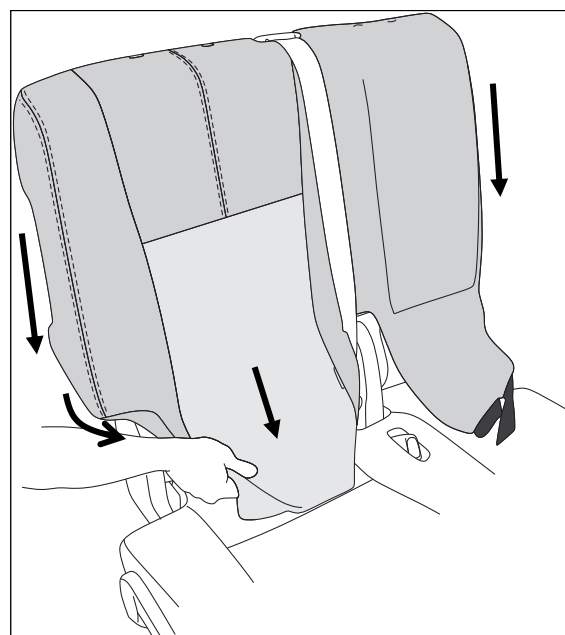


Figure 3.

Step 4.

Push seat cover under headrest guide mechanisms to hold the top part of the seat cover in place and centrally aligned.

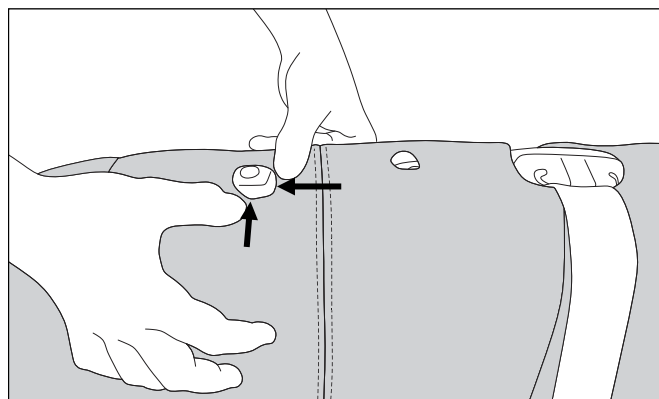


Figure 4.

Step 5.

From the back of the seat, attach the hook (hard) and loop (soft) tapes behind the seat belt guide mechanism.

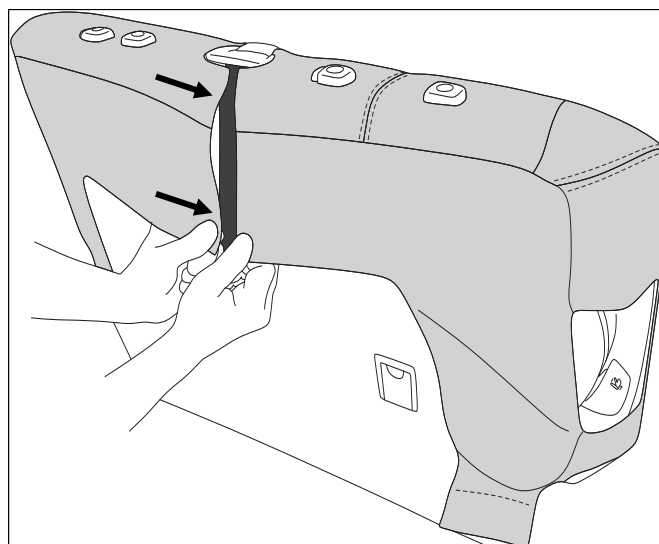


Figure 5.

Step 6.

From the back of the seat, attach the hook (hard) tapes to the carpeted seat backing.

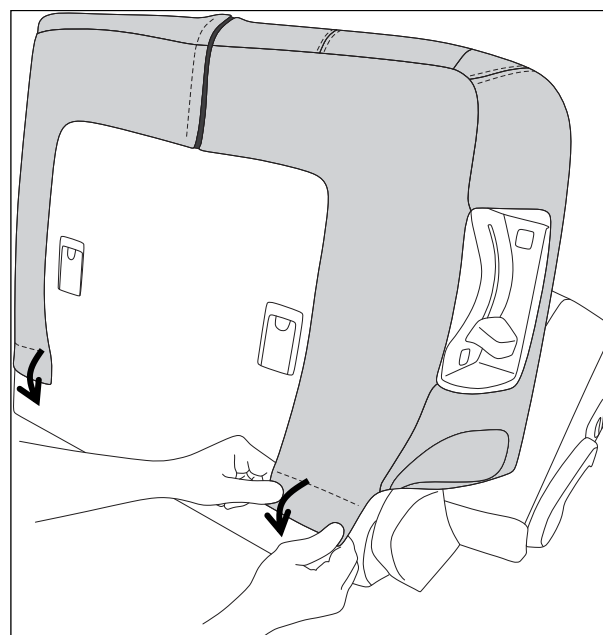


Figure 6.

Step 7.

Once aligned, push the middle parts of the backrest cover which consists of 2 hook (hard) and 2 loop (soft) tapes through in-between the seat backrest and cushion.

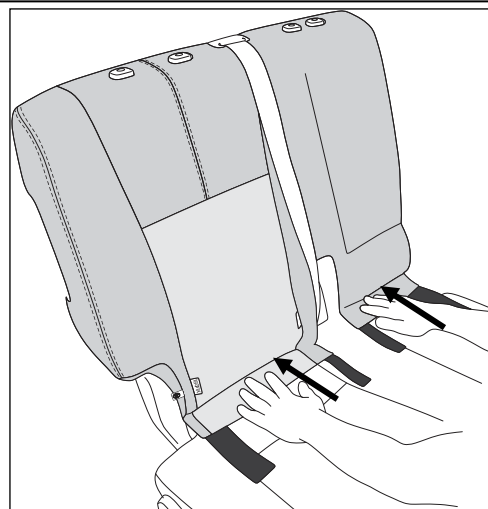


Figure 7.

Step 8.

From the back of the seat pull the middle parts of the backrest cover evenly from in between the seat backrest and cushion.  
To ensure a snug fit, check that it has been pulled through evenly from the front to the rear.

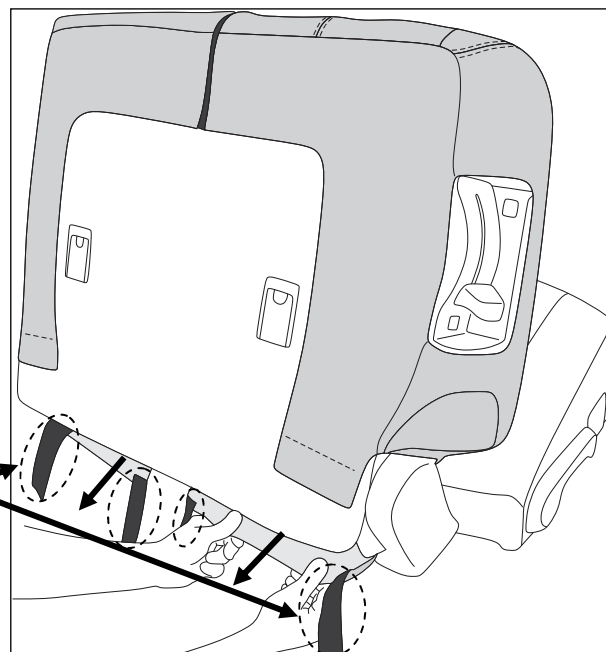



Figure 8.

 <p><b>Important</b></p>	<p>Do NOT pull directly from the hook (hard) or loop (soft) tapes as it may cause the stitching to break</p>
---	--

Step 9.

Attach the 2 hook (hard) tapes to the middle of the carpeted seat backing.  
Attach the 2 loop (soft) tapes under the hook (hard) tapes on the inner side of the backrest cover.

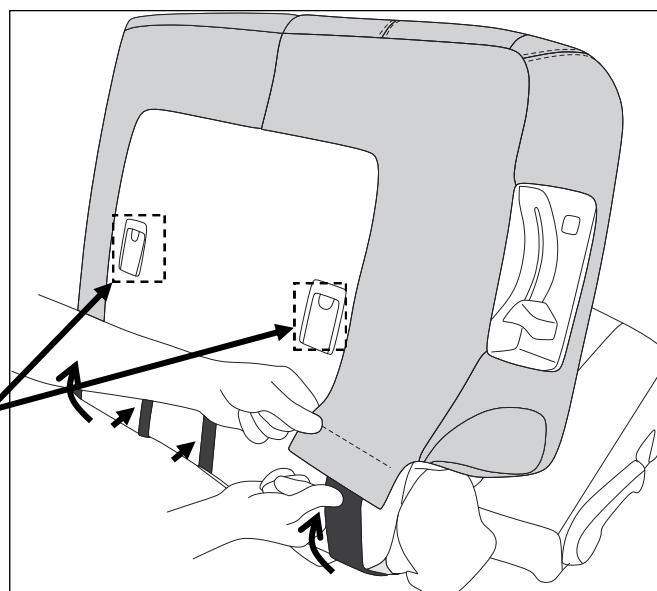



Figure 9.

 <p><b>Important</b></p>	<p>Ensure the fitted cover does not overlap the child restraint anchor points on the back of the seat backrest</p>
---	--

Step 10.

Ensure the backrest cover is aligned to all seat backrest seams and all hook (hard) and loop (soft) tapes are attached in the locations shown.

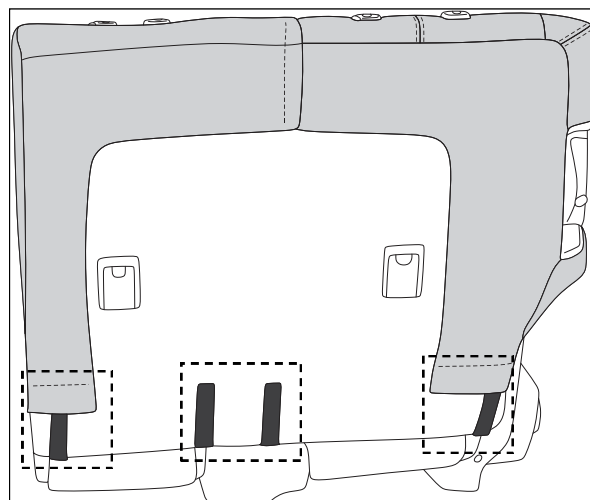


Figure 10.

Step 11.

**LH Backrest (40%) Cover Installation**

Locate the LH backrest cover. It is the smaller of the two backrest covers.  
Guide backrest part of cover over backrest by pulling evenly at each side and keeping the seat cover aligned with the seat at all times.



**Note**

When installing one side, fold other side backrest down and slide the seat forward for better access to the side being installed

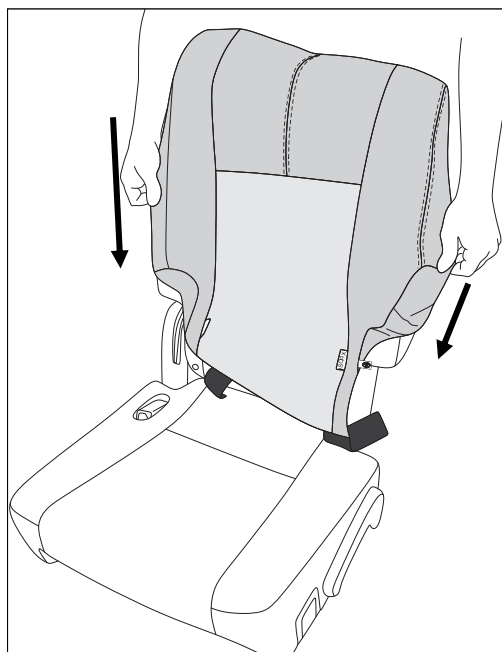


Figure 11.

Step 12.

For best and even fitment, work down the sides of the backrest cover evenly to align the backrest cover seam to the seat backrest seam.  
Wrap the outer bottom corner of the backrest cover around the bottom corner of the seat backrest.  
As per Step 4, push seat cover under headrest guide mechanisms to hold the top part of the seat cover in place and centrally aligned.


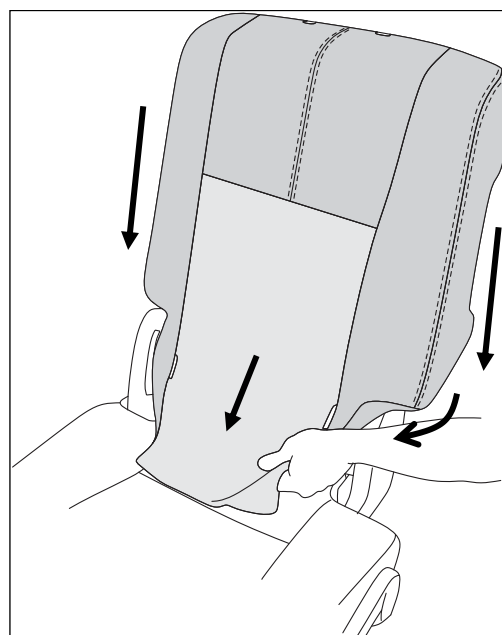


Figure 12.

Step 13.


Once aligned, push the middle parts of the backrest cover which consists of 2 loop (soft) tapes through in-between the seat backrest and cushion.

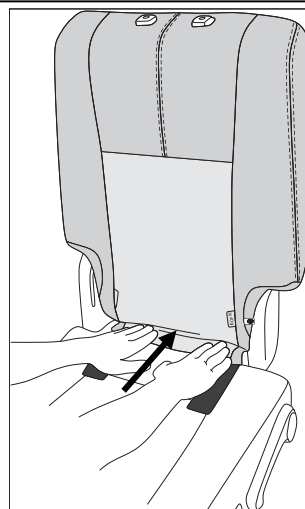


Step 14.

Figure 13.

From the back of the seat pull the middle parts of the backrest cover, where the loop (soft) tapes are sewn, evenly from in between the seat backrest and cushion.  
To ensure a snug fit, check that it has been pulled through evenly from the front to the rear.


 <p><b>Important</b></p>	<p>Do NOT pull directly from the loop (soft) tapes as it may cause the stitching to break</p>
---	---

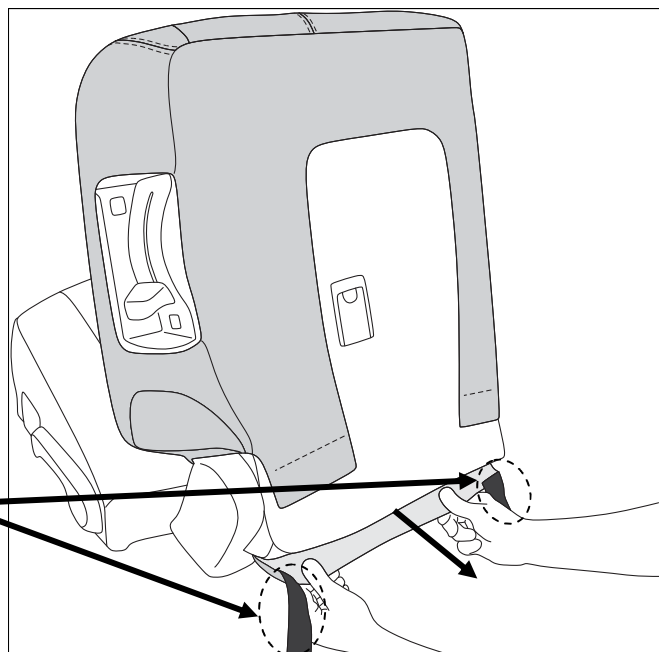

Step 15.

Figure 14.

Attach the 2 loop (soft) tapes under the hook (hard) tapes on the inner side of the backrest cover.

 <p><b>Important</b></p>	<p>Ensure the fitted cover does not overlap the child restraint anchor point on the back of the seat backrest</p>
---	---

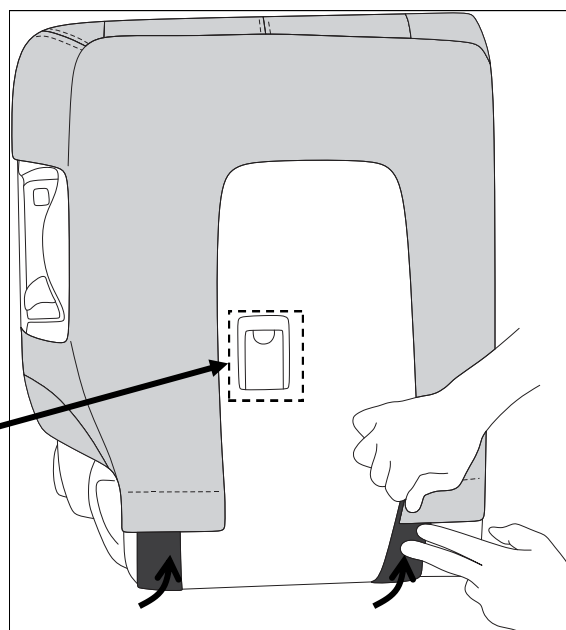


Figure 15.

Step 16.

**RH Cushion (60%) Cover Installation**

Locate the RH cushion cover. It is the larger of the two cushion covers.  
Start by placing cushion cover over the seat cushion and guide the outer seat adjustment mechanism through the hole in the cushion cover.

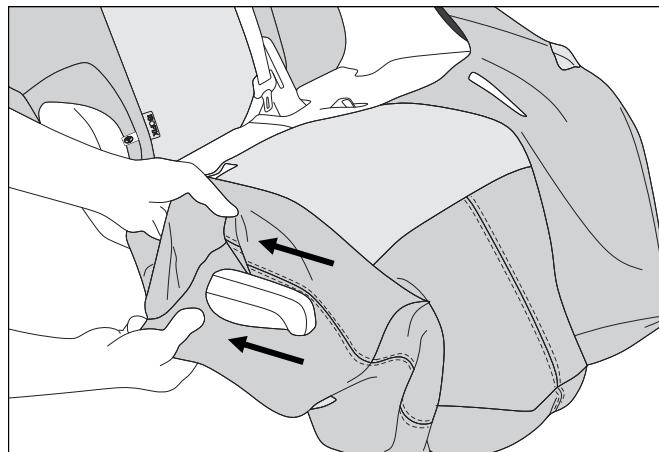


Figure 16.

Step 17.

Fit the RH cushion cover over the top of the seat cushion, ensuring that seat is completely covered and cushion cover seams align with seat seams.

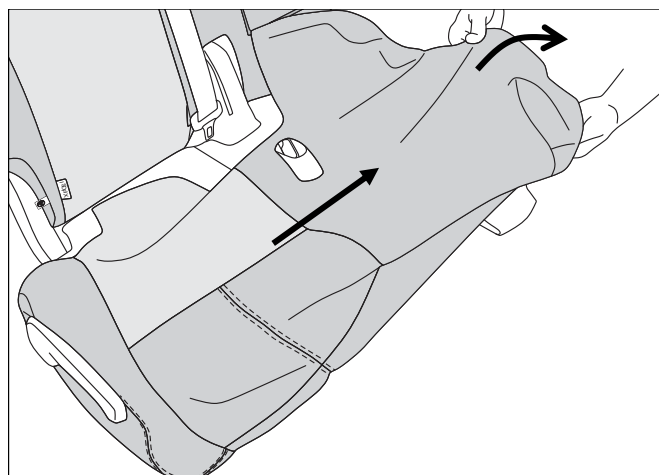


Figure 17.

Step 18.

Once seat cushion is covered, gently pull cover towards the back of the cushion, ensuring the cushion cover seams remain aligned with the cushion seams.

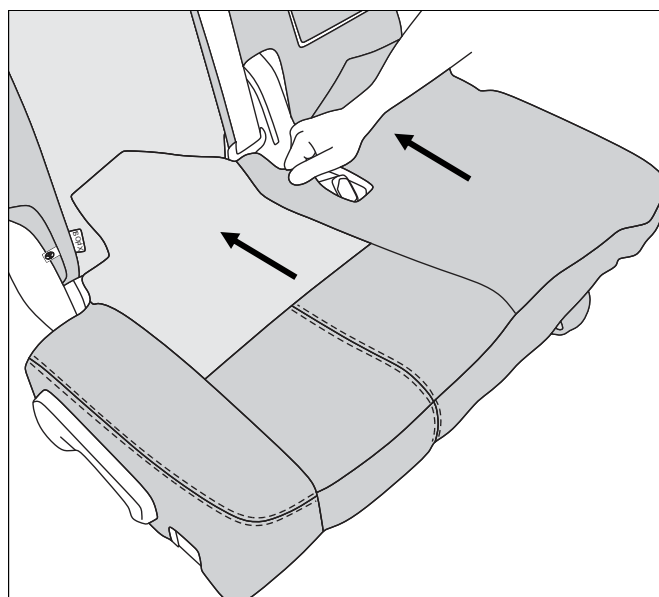



Figure 18.



Step 19.

Guide the back outer panel of the cushion cover in between the seat cushion and backrest towards the back of the seat.

To ensure a snug fit, check that it has been pushed through evenly from the front to the rear.

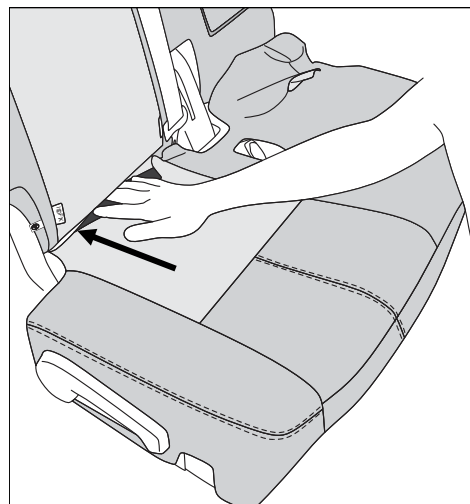

Step 20.

Figure 19.

Continue to guide the back inner panel of the cushion cover in between the seat cushion and backrest towards the back of the seat.

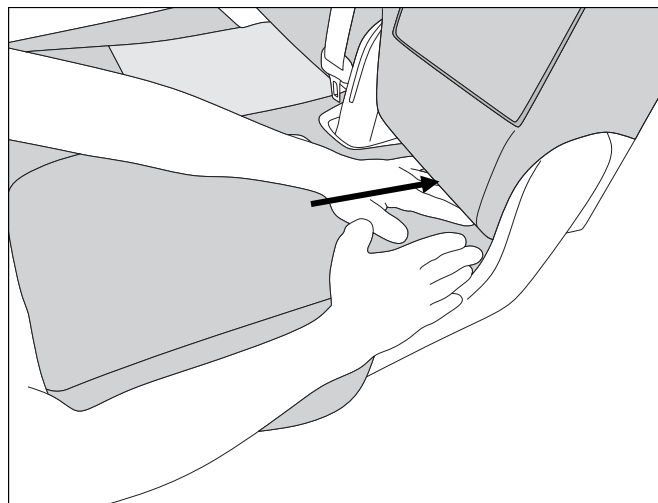


Figure 20.

Step 21.

From the back of the seat pull the cover where the hook (hard) tape is sewn, evenly from in between the seat backrest and cushion.

Attach the hook (hard) tape to the carpeted back of the seat cushion.

To ensure a snug fit, check that it has been pulled through evenly from the front to the rear.

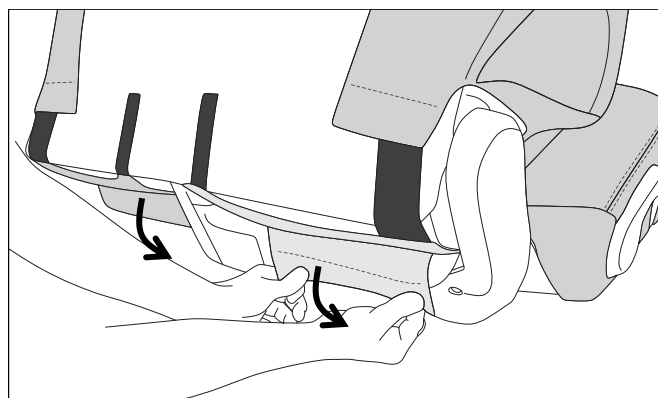


Figure 21.

Step 22.

Ensure the seat adjustment levels are clear of the seat cover and are free to move.

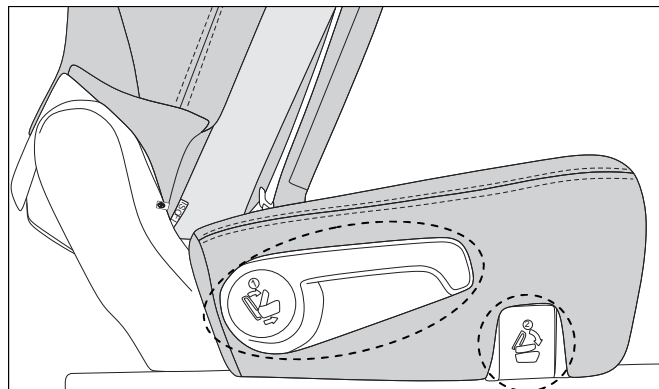


Figure 22.

Step 23.

From underneath the seat, locate the 6 clips and attach to the bars under the seat in the areas shown.

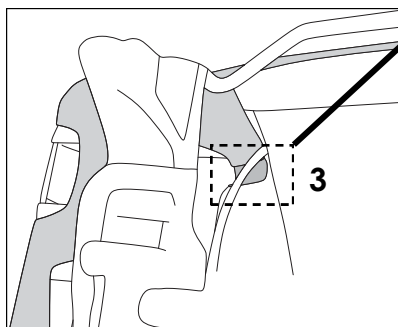


Figure 23b.

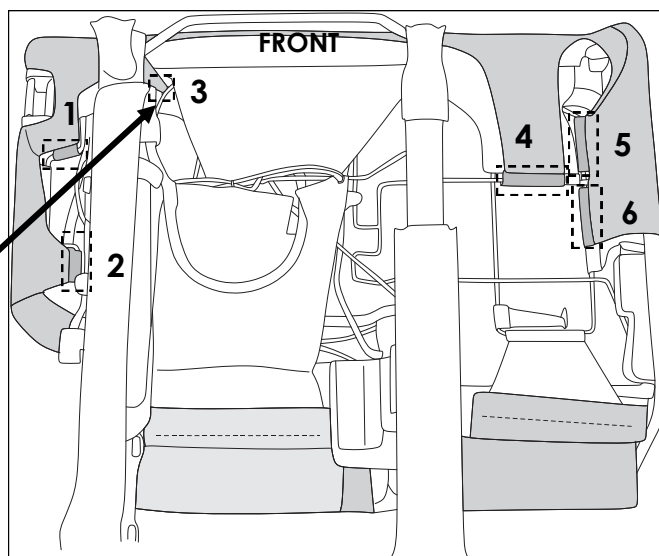


Figure 23a.

Step 24.

**LH Cushion (60%) Cover Installation**

Locate the LH cushion cover. It is the smaller of the two cushion covers.  
Start by placing cushion cover over the seat cushion and guide the outer seat adjustment mechanism through the hole in the cushion cover.

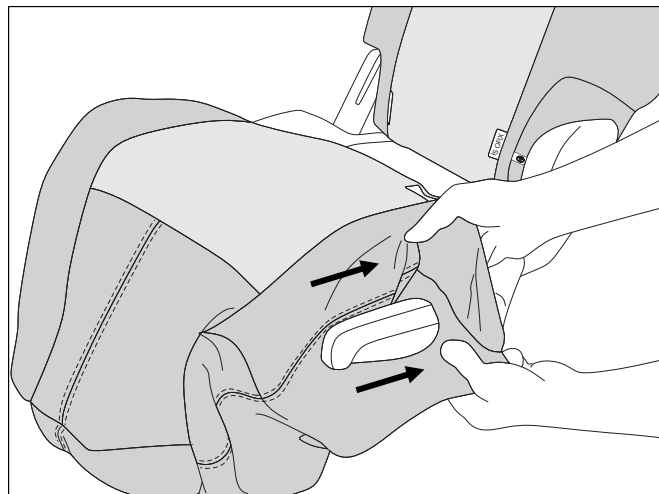


Figure 24.

Step 25.

Fit the LH cushion cover over the top of the seat cushion, ensuring that seat is completely covered and cushion cover seams align with seat seams. Evenly guide the inside corner of the cushion cover over the corner of the cushion. Once seat cushion is covered, gently pull cover towards the back of the cushion and push through in between the seat cushion and backrest towards the back of the seat. Ensure the cushion cover seams remain aligned with the cushion seams.

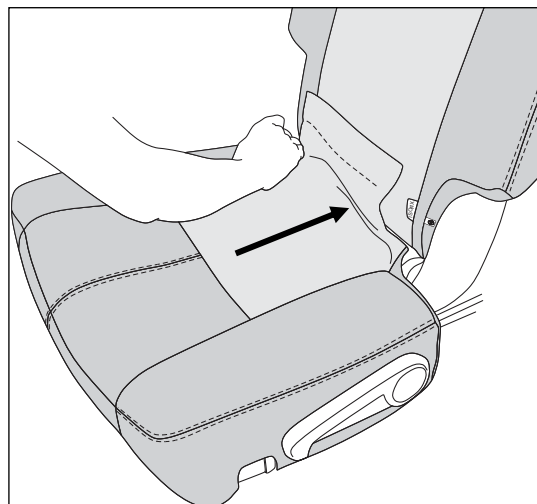


Figure 25.

Step 26.

From the back of the seat pull the cover where the hook (hard) tape is sewn, evenly from in between the seat backrest and cushion. Attach the hook (hard) tape to the carpeted back of the seat cushion. To ensure a snug fit, check that it has been pulled through evenly from the front to the rear.

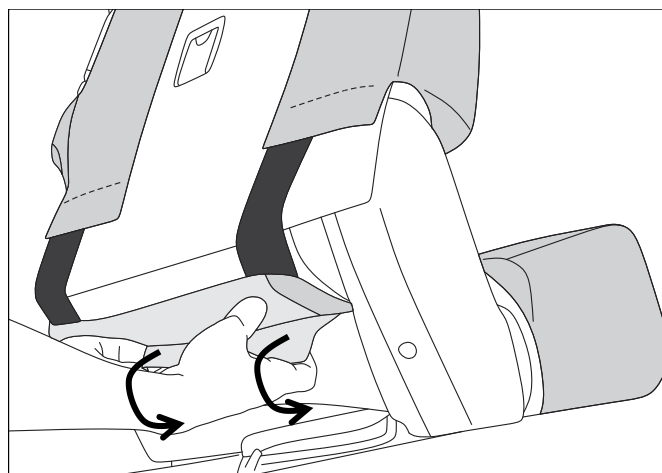


Figure 26.

Step 27.

Ensure the seat adjustment levels are clear of the seat cover and are free to move.

From underneath the seat, locate the 4 clips and attach to the bars under the seat in the areas shown.

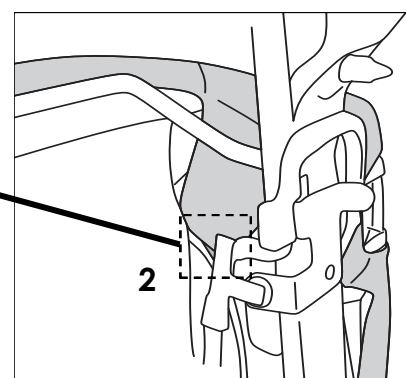
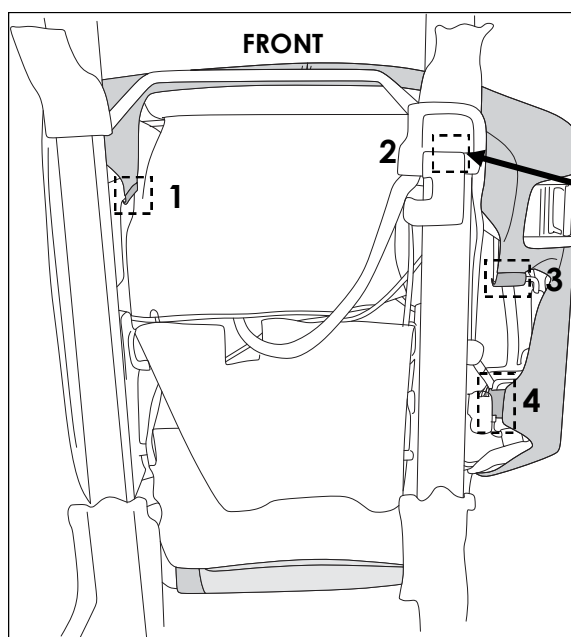




Figure 27b.

Figure 27a.

Step 28.

**Side Headrest Cover Installation**

Slide headrest cover down over headrest working down evenly from front and back flaps.

 <b>Note</b>	<p>Front face of headrest cover has top stitching around the edges</p>
 <b>Important</b>	<p>Do NOT pull from side flaps as it may cause the stitching to break</p>

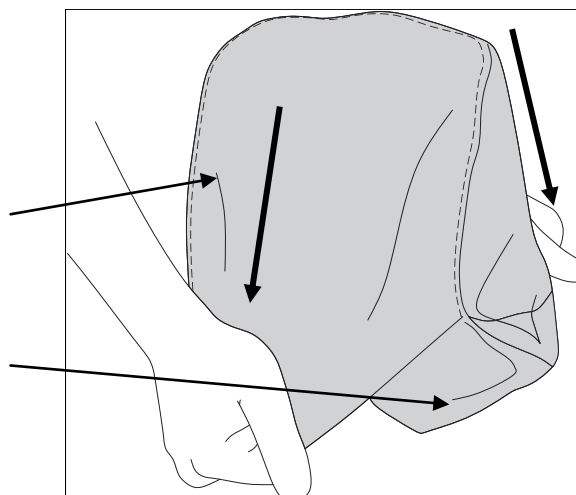



Figure 28.

Step 29.

Gently guide and fold the side flaps in so the middle grooves line up wrapping around the headrests prongs.

 <b>Note</b>	<p>Keeping headrest centrally aligned from the start improves the fitment. Ensure the top stitching on the top edges are aligned with the headrest edges</p>
--	--

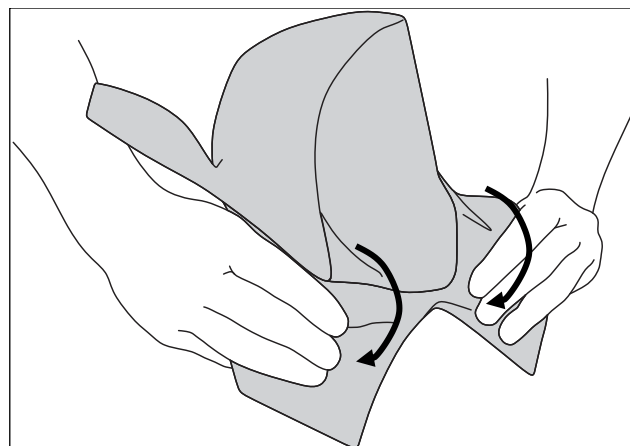


Figure 29.

Step 30.

Fold and align the side flaps neatly around the headrest prongs for a snug fit, then fold front and back flaps in as well.

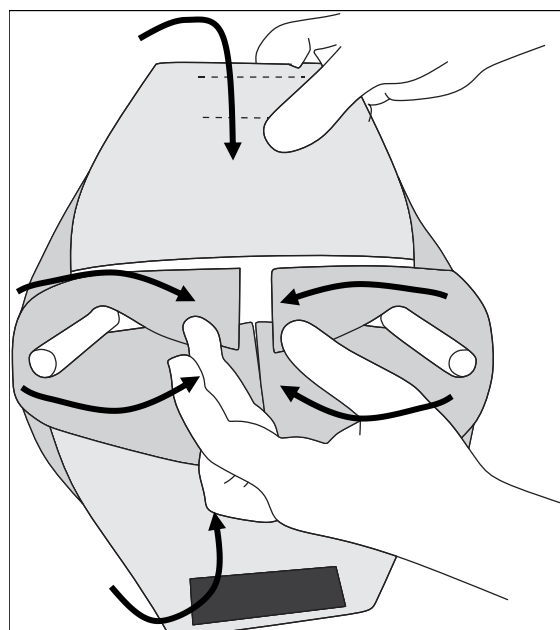


Figure 30.

Step 31.

Secure the hook (hard) & loop (soft) tapes underneath the headrest.

Repeat installation procedure for remaining side headrest cover.

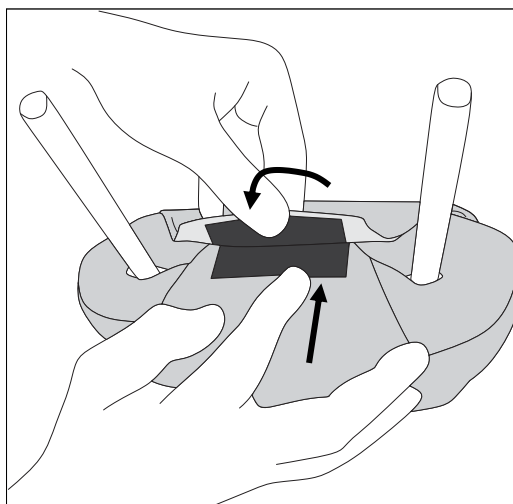


Figure 31.

Step 32.

**Centre Headrest Cover Installation**

Slide headrest cover down over headrest working down evenly from front and back flaps.

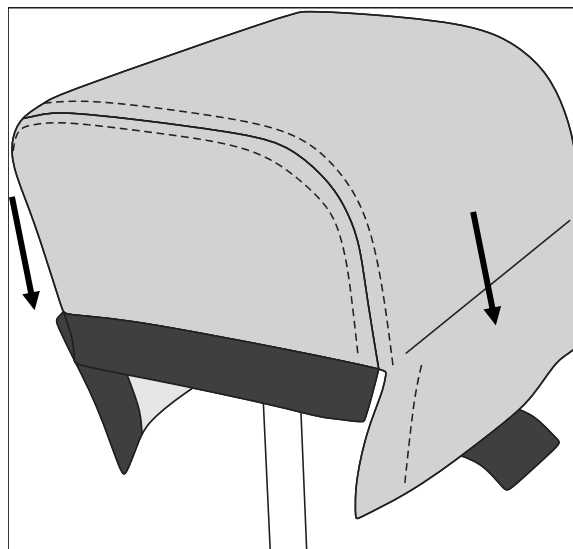


Figure 32.

Step 33.

Secure the hook (hard) & loop (soft) tapes underneath the headrest.

This completes the installation of your headrest covers. Re-install headrests to your seats.

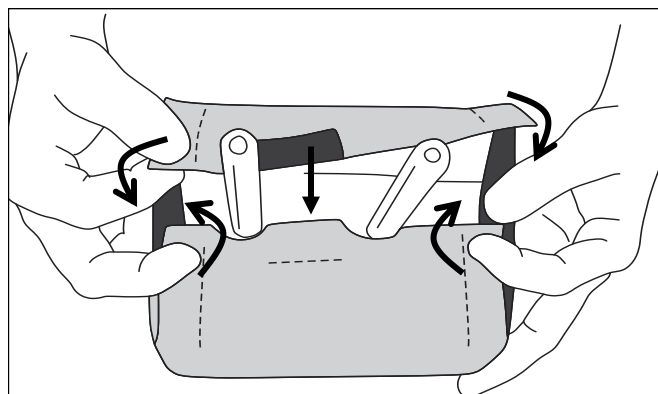


Figure 33.