Instructions - Radius Arm Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application: BMW - F20 Series

F30 Series

F80 Series

Contents: 2x bushings


2x offset steel tubes


1x grease

- 1. Raise vehicle and safely support. Remove front wheels.
- 2. Un bolt radius arm mounting bolt and ball joint and remove arms.
- 3. Press/push out worn bushings, careful to safely support and not damage the aluminium arms.
- 4. Press new bushings in arm this is best achieved with soapy water.

Note bushing flange thickness - the thinner flange is to accommodate the adjusting hex. Press bushing in arm to best suit adjustment access on vehicle.

- 5. Lubricate bushing ID and face with the supplied grease and push the supplied tubes in position.
- 6. Tighten all bolts and carry out wheel alignment note image below for adjustment reference.
- 7. Re check after initial 100kms

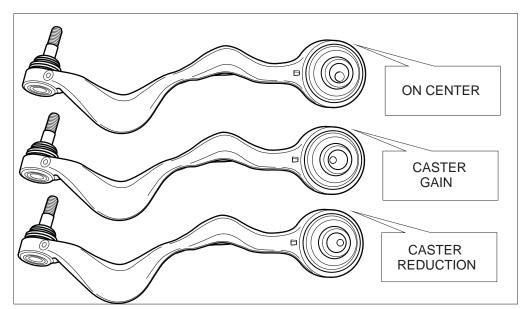

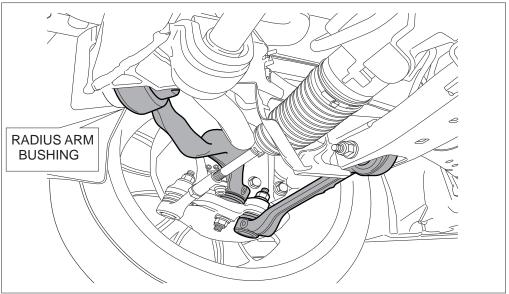

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above. Copyright ABN 99 124 177 297