

## Fitting Instruction

When replacing the bearing plate, ensure that the lower control arm pivot bolts have been loosened. This is to prevent the bush from binding during installation of the bearing plates.

Once the vehicle is back on the ground and the suspension has settled to its normal ride height, then retension the pivot bolts to vehicle manufacturers specifications.

**Note:** Split in bearing is standard and part of natural manufacturing process.