Instructions Pan-hard Rod Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

• Lift vehicle via Ramps or a 4-post hoist.

This job is best done while vehicle is at ride height

- Proceed to un-bolt Pan-hard Rod.
- A Press will be required to remove the original bushing Press out old bushing including steel outer shell.

Note - these bushings are to suit 36/39mm size Panhard Rod internal hole diameters. Refer catalogue for other sizes

• Grease bushing internal diameter and side face with supplied grease only.

 Push in supplied tubes and re-fit Rod to vehicle. **Application** - Jeep Wrangler - 2007-2018

(Refer current catalogue for complete listing)

Contents - Bushing 92054 x1

- Bushing 92078 x1
- Steel tube 22x14x40.5 x2
- Grease



Grease bushing ID and side face



- During install of Pan-hard Rod, you may have to push the body sideways to then push bolts back in.
- Road test vehicle.
- Re-check all bolts after 100kms travelled,

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.