Install Guide Front Control Arm -Lower Inner and Rear Bushing


Raise vehicle evenly and safely support
Never rely on a Jack only

Tip - lubricate all bolts before starting

- Proceed to remove front wheels. Next, unbolt swaybar link, ball joint and bushing nuts and bolts
- Remove control arms from vehicle.
- For new control arm, grease front bushing internal diameter and side faces

IMPORTANT - refer below image for washer placement

- Re-fit arm to vehicle. Place supplied washer on top of bushing - refer image below.
- A wheel alignment is recommended after install - to correct any Toe change.
- Re-check all bolts after 500-1000kms

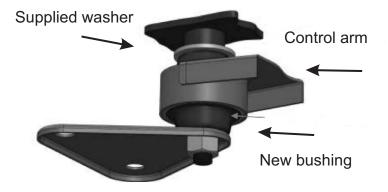

Application - Subaru - various models (always refer current catalogue listing)

Contents - 1x control arm with bushings

- 1x flat washer 45x20x3mm
- Grease

Control Arm 2016-on models Note bushing height is 10mm



Note - It is recommended that a licenced workshop or tradesperson carry out the below procedure and that workshop manual and relevant safety procedures are followed in addition to the above.