

# INSTALLATION GUIDE

## Beam Axle Bushing

**N.B:** This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

### Application:

Honda Jazz - 2007-2014

### Contents:

2x large bushings

2x small bushings

2x steel tubes

Grease

1. Raise vehicle evenly and safely support.

Note - this procedure can be performed while Beam is still in vehicle.

2. Un-bolt both LH and RH mounting bolts and lower Beam down slowly.

Use a stand to support.


3. Use either a Air-hacksaw or Air-chisel to remove OE bushing 'outwards' (note OE bushing flange on one side).

4. Install new bushings into clean Eyelet - note image below for bushing position.

5. Grease bushing ID and face with supplied grease - push in supplied steel tubes.

6. Re-fit Beam to vehicle - tighten bolts to manufacturers specifications.

7. Re-check bolts after initial 100kms travelled.

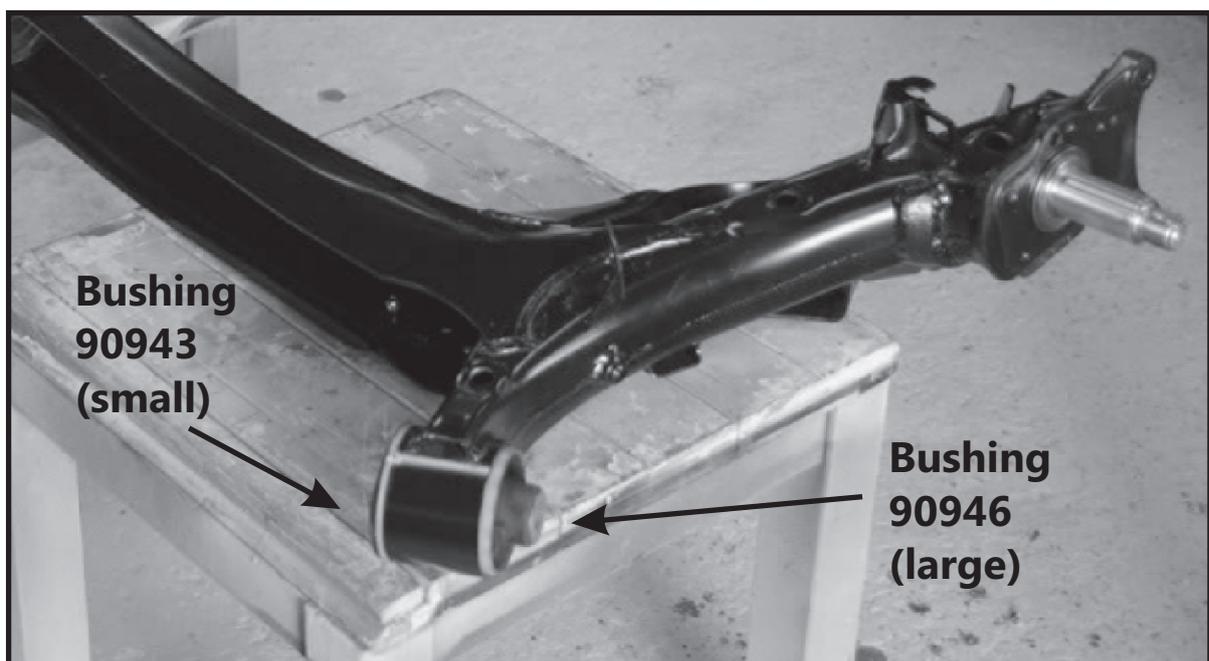

**N.B:** It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above