





FITTING OF CROSS BARS TO VEHICLE

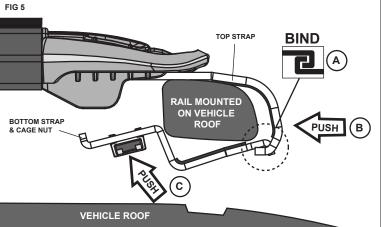

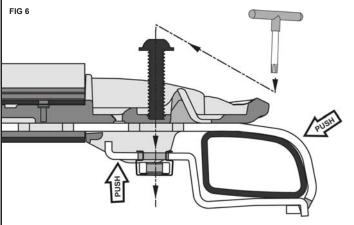

INSERTING COVERS

6. With the Top Strap sitting slightly outboard of the rails, proceed to feed the Bottom Strap around the rail and in position as shown in (Fig.5). Ensure to Bind the two straps together (A). Secondly, push the joined straps together up against the vehicle's rail. (B) As you push inwards, also push the Bottom Strap upwards, to bring the straps horizonally parallel to each other. (C).

7. As you push the Bottom Strap upward, introduce the Star Head Bolt through the End Support & Straps. Using the T-Handle provided, fasten the Straps together - ensuring they are fixed in the correct positions along the rail as specified in (Fig. 4) on the first page. Gradually tighten bolts alternatively ensuring Straps are properly engaged, until even tensioning is achieved.

Ensure that both bars are parallel to each other and the straps are tightly mounted against the rail. Ensure the bolts are tightened and the cross bars are well secured. Perform a quick check by tugging the bars back and forth.

8. Remove covers from Kit. Locate 2 ribs on the underside of the cover(Fig. 8). There are also two designated channels on the End Support Chassis into which these ribs locate.(Fig 7). Insert the Cover into the End Support Chassis by sliding it through the channels until they positively mate.


LOCKING AND REMOVING COVERS


9. You Covers Keys should now be inserted into all 4 covers. With the keys in place, lock the cylinder by rotating 1/4 turn clockwise. (Fig 9) Repeat this process for all 4 covers. Please store the keys in a safe place, ie. with car Keys or in vehicle's glove compartment.

10. To remove the Covers, firmly grip the edge of the cover with your fingers (as shown by arrow) in Fig. 11), and pull the cover towards you - (arrow) in Fig. 11)

TIP: Ensure the covers are locked into place on the End Support when you store your roof-racks away.

GENERAL USAGE INFORMATION

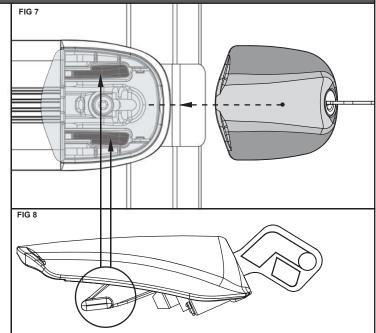

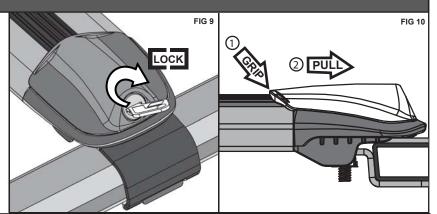

REGULARLY CHECK THE TIGHTNESS OF LOCKING STRAPS.



Loads should be evenly distributed and secured.

A number of accessories for carrying special loads is available. Only use NON-STRETCH tie down straps.

Any weight carried on the vehicle will adversely affect its handling particularly in cornering or in a cross wind and the vehicle should therefore be driven with increased caution.

For full warranty information, visit our website: www.rola.com.au

page 2 of 2