

Instructions

Radius Rod Bushing

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Raise vehicle evenly and safely support.

Never rely on a Jack only

- Lubricate Radius Rod bolts well prior to removing.
- Un-bolt Radius Rods from control arm and chassis.

Application - Honda/Acura Integra
- 1990-1993

Always refer complete catalogue listing

Contents - Bushings 90130 x 4
- Steel tubes 18x12.2x59.6 x2
- Grease


Remove original bushings but retain original washers

- Grease supplied bushings with supplied grease only
- grease bushing internal diameter and face.
- Place new supplied bushing **90130** as per image.
- push in supplied steel tubes.
- Tight all nuts and bolts with original hardware.



A Wheel Alignment is required after install.

- Re-check all bolts after 100kms travelled

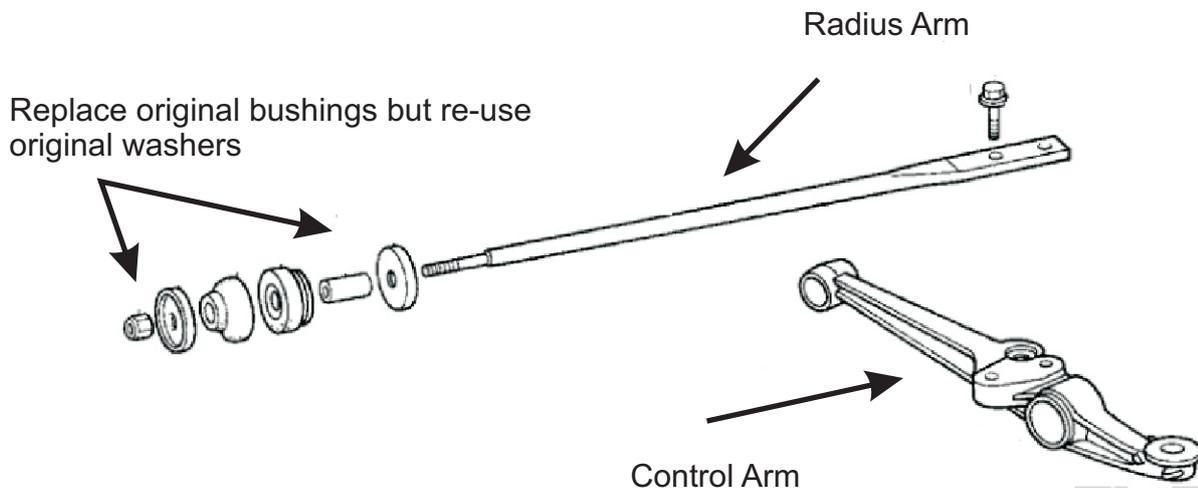

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.