

# INSTALLATION GUIDE

## Front Control Arm Lower Bushings

### Application:

Ford Ranger - 11/2011 - 6/2015  
BT 50

### Install guide

1. Raise vehicle and safely support.
  2. Remove lower control arms from vehicle.
  3. Proceed to remove control arm bushings - this can be achieved by drilling the rubber and cutting the outer steel shell.
  4. Once removed, check for any burs - clean eye-rings.
  5. Place the supplied voided bushing into the rear point - refer image 2.
- Note: Bonded washer to sit on outside of eye-ring - refer image 3.
6. Place the supplied solid bushing into the front point.
  7. Grease inside and face of bushings - fit supplied tubes.

Washers to be placed outside of bushings, between sub-frame and bushing - refer image 1.

8. Re-fit arms to vehicle - carry out a wheel alignment.
- Re-check bolts after 100km travelled.

