

Instructions

Front Radius Rod Bushing

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Install Guide

- Raise vehicle evenly and safely support.

Never rely on a Jack only

- Proceed to remove front wheels.
- Un-bolt front radius arms from vehicle.

**A Press will be required to remove bushings.
Press out complete bushing including
steel outer shell.**

- Press in new supplied bushing - place side with part number on inside of vehicle.


Press in so outer shell sits central in arm.

- Grease bushing ID and face with supplied grease.

- Push in supplied tube. Place supplied washer on outside of vehicle.

- Re-fit arm to vehicle. Re-check all bolts after 100kms travelled.

Part number located here (inside of arm)

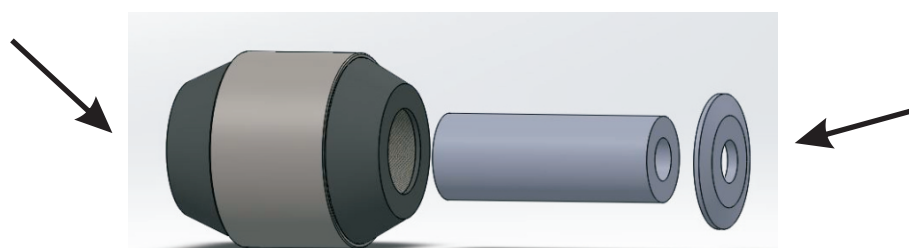


New bushing New tube

Application - Ford Mustang
- S550 2015-on

(Refer current catalogue for complete listing)

Contents - Bushing 91766 x2
- Steel tube 32x16x84.4mm x2
- Steel washer 50x16x4 x2
- Grease

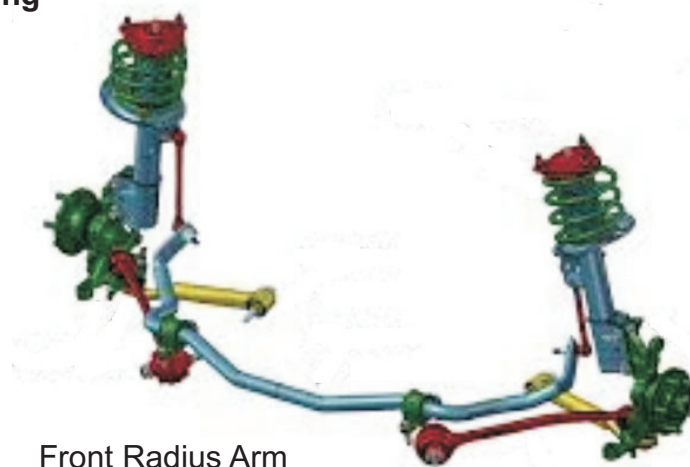

Front Radius Arm

Place supplied washer on outside of vehicle

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.