Fitting Instructions #5215IS Ford Territory / Falcon BA, BF & FG *Rear Differential Bushing*



Note: This instruction sheet is a suggested method of removing the diff bushes. There are varies techniques and tools available to do the job. Manufacture's torque settings should be used to tension all bolts.

- Remove the rear seat base, disconnect the wheel speed sensors and push out from rubber bung;
- Set the car up on a hoist and remove the rear wheels, remove the rear brake calliper mounting bolts and secure calliper out of the way;
- o Remove rubber exhaust hangers;
- Mark the tail-shaft position and counterweights, and disconnect the shaft;
- Disconnect the handbrake cables from the 'T' junction;
- Remove the 2 stabilizer rod bolts from the chassis rails, also remove the side bolt from the right side of the rear diff bush housing near the wheel well;
- Support lower control arm and remove the lower shock absorber bolt, also remove the 2 front blade control arm nuts, lower down until blade control arm is clear from the studs. Be careful of spring tension;
- Lower the car and support the cradle with 3 or more jack stands or similar, then remove the 6 sub-frame nuts/bolts;
- Slowly raise the vehicle making sure no wires brake lines, shock absorbers, etc., are damaged;

- Separate and lower rear end from vehicle, Figure 1;
- o Remove diff vibration absorber;
- Use screwdriver or chisel to crush the outer shell and remove bush. Force may be needed to be applied to the other side of the bush to remove it;
- Fit new bush. Ensure that bush is kept square to the mounting surface. All thread and washers and spacers may aid the process;
- See Following Pages for outrigger bush replacement instructions;
- Reassemble the vehicle in reverse order.



Figure 1 - Back end removed from vehicle

Fitting Instructions #5215IS



Diff outrigger arm bushes

- Remove exhaust heat shield and remove both outrigger bolts;
- Undo the three side bolts of the diff arms and lever diff to remove arms;
- Use a hacksaw or similar to cut through the nylon shell, and then chisel the shell out or use a pair of vice grips to remove or use a screwdriver, as shown in Figure 2, to fold the shell and remove;
- Clean any burrs that may have happened;
- Use an all-thread and appropriate washers/bearings, Figure
 3, to draw the bush in until it is 5 7mm recessed into cradle;
- Refit the outrigger arms to the diff then fit the supplied new washers over the existing bolts. NOTE: (Avoid damaging the bush during installation.)
- Reverse disassembly procedure to reinstall.

Note: Make sure there is clearance between the outriggers and the cradle; Make sure there is clearance between the fuel tank and the LH outrigger bolt.



Figure 2 – Removal of differential outrigger bush



Figure 3 – Insertion of new outrigger bush

