

Headlight sensor bracket is located on rear axle driver side. Remove bolt securing bracket and insert spacer underneath bracket. Use supplied longer bolt to fasten.



