

- Note: Polyurethane bushings must be fitted to both sides of the vehicle.
- Wheel-align the vehicle before the job is started and note settings;
- Jack the vehicle up and support on jack stands/hoist;
- o Remove the rear trailing arms;
- Remove original shell parts from the housing with the use of a hydraulic press and suitable pressing tools;
- o Clean the housing and the brackets;



Figure 02 – '4927' Bush Installation



Figure 01 – '4927' Bush Installation

- Using the grease supplied, lubricate the housing and outside diameter of the new bushes and push them in, Figure 01 and Figure 02;
- Generously lubricate the outside of the steel tubes and inside of the bushes, then push the steel crush tubes into the bushes, Figure 01;
- Slide the control arm into the bracket, as show in Figure 02;
- Refit the trailing arms to the vehicle and tighten all bolts to manufacture's torque settings;
- o Carry out wheel alignment.