

# Fitting Instructions #4361IS

Ford Ranger PJ, PK / Mazda BT-50

## Drive Shaft Kit

- Remove centre bearing nuts;
- Fit spacer/washers as per picture 8mm and 4mm on top, and then 8mm on the bottom;
- Drop loctite on the thread and tighten the bolt to 40Nm;
- Test drive and adjust spacer position as required;



Diagram shown below is the start out position to eliminate vibration. Adjust as necessary.

