## **Fitting Instructions #0499IS**

## **Steering Coupling Bushing**

**Holden Torana** 



- Rivet heads to be removed with 3/8 drill after marking with centre punch.
- Use 5/16 pin punch to drive out rivets.
- Using hardware supplied re-assemble as shown.

