

Fitting Instructions #0500IS

Steering Coupling Bushing

Rivet heads to be removed with 3/8 drill after marking with centre punch. Use 5/16 pin punch to drive out rivets. Using hardware supplied re-assemble as shown.

