

Fitting Instructions #1230IS

Ford Corsair / Nissan Pintara

Front Control Arm Lower Inner Rear Bushing



Steel washers included in this kit **must be used** to resist movement under braking.

Washers supplied are an interference fit on the pivot pin and can be effectively fitted by using a steel tube with the internal size of approximately 28mm and a ball-pein hammer.

Ensure that the grease supplied is used on all mating steel surfaces.

Fitting Instructions #1230IS

Ford Corsair / Nissan Pintara

Front Control Arm Lower Inner Rear Bushing



Steel washers included in this kit **must be used** to resist movement under braking.

Washers supplied are an interference fit on the pivot pin and can be effectively fitted by using a steel tube with the internal size of approximately 28mm and a ball-pein hammer.

Ensure that the grease supplied is used on all mating steel surfaces.

Fitting Instructions #1230IS

Ford Corsair / Nissan Pintara

Front Control Arm Lower Inner Rear Bushing



Steel washers included in this kit **must be used** to resist movement under braking.

Washers supplied are an interference fit on the pivot pin and can be effectively fitted by using a steel tube with the internal size of approximately 28mm and a ball-pein hammer.

Ensure that the grease supplied is used on all mating steel surfaces.

Fitting Instructions #1230IS

Ford Corsair / Nissan Pintara

Front Control Arm Lower Inner Rear Bushing



Steel washers included in this kit **must be used** to resist movement under braking.

Washers supplied are an interference fit on the pivot pin and can be effectively fitted by using a steel tube with the internal size of approximately 28mm and a ball-pein hammer.

Ensure that the grease supplied is used on all mating steel surfaces.