

Instructions

Front Control Arm Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application - Honda Civic FK


(Refer current catalogue for complete listing)

- Raise vehicle evenly and safely support.

Never rely on a Jack only

- Proceed to remove front wheels. Un-bolt front control arms.
- The original bushing will need to be pressed out or drilled out. If drilling - drill closest to the welds on control arm.
- Refer image below for bushing installation.
- Grease bushing internal diameter and face.
- Push in supplied steel tube and washer as per below - note steel tube is stepped.
- Re-fit arm to vehicle.
- A wheel alignment after install is recommended.

Contents - Bushing 69214 x2
 - Bushing 69215 x2
 - Steel tube 24x14x60 x2
 - Steel washer 38x22x3 x2
 - Grease

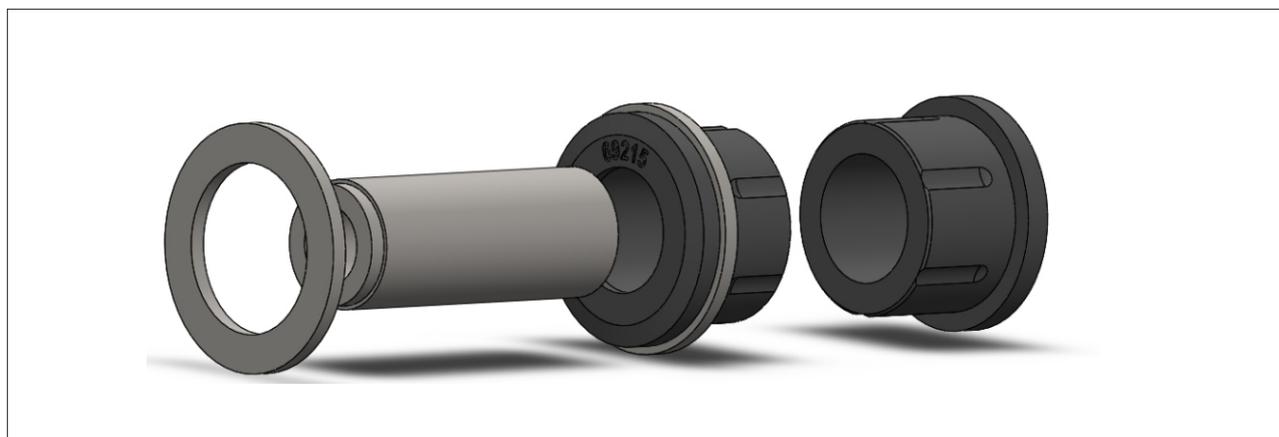

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.