

Install Guide

Rear Differential - Front Bushing

- Raise vehicle evenly and safely support with a hoist or stands.

Never rely on a Jack only


- Proceed to support the rear diff with a stand or a jack with timber.
- Un-bolt the front bushing bracket from the front of the rear diff.
- Using a hydraulic press, press out the original diff bushing including the steel outer shell. careful to not damage the aluminium housing.
- Proceed to press in new bushing 20125Z into clean housing. Press bushing in so it sits centrally in the arm. Refer RH image -
- Lightly grease bushing internal diameter with supplied grease only.
- Push in supplied steel tube into bushing.

- Re-fit bracket to diff using original bolts. Refer chart below for bolt torque guide.
- Road test vehicle.
- Re-check all bolts after 500kms

Application - Mitsubishi Outlander
- 2018-2021

(Always refer current catalogue listing)

Contents - Bushing 20125Z x1
- Steel tube 24x12.3x42 x1
- Grease

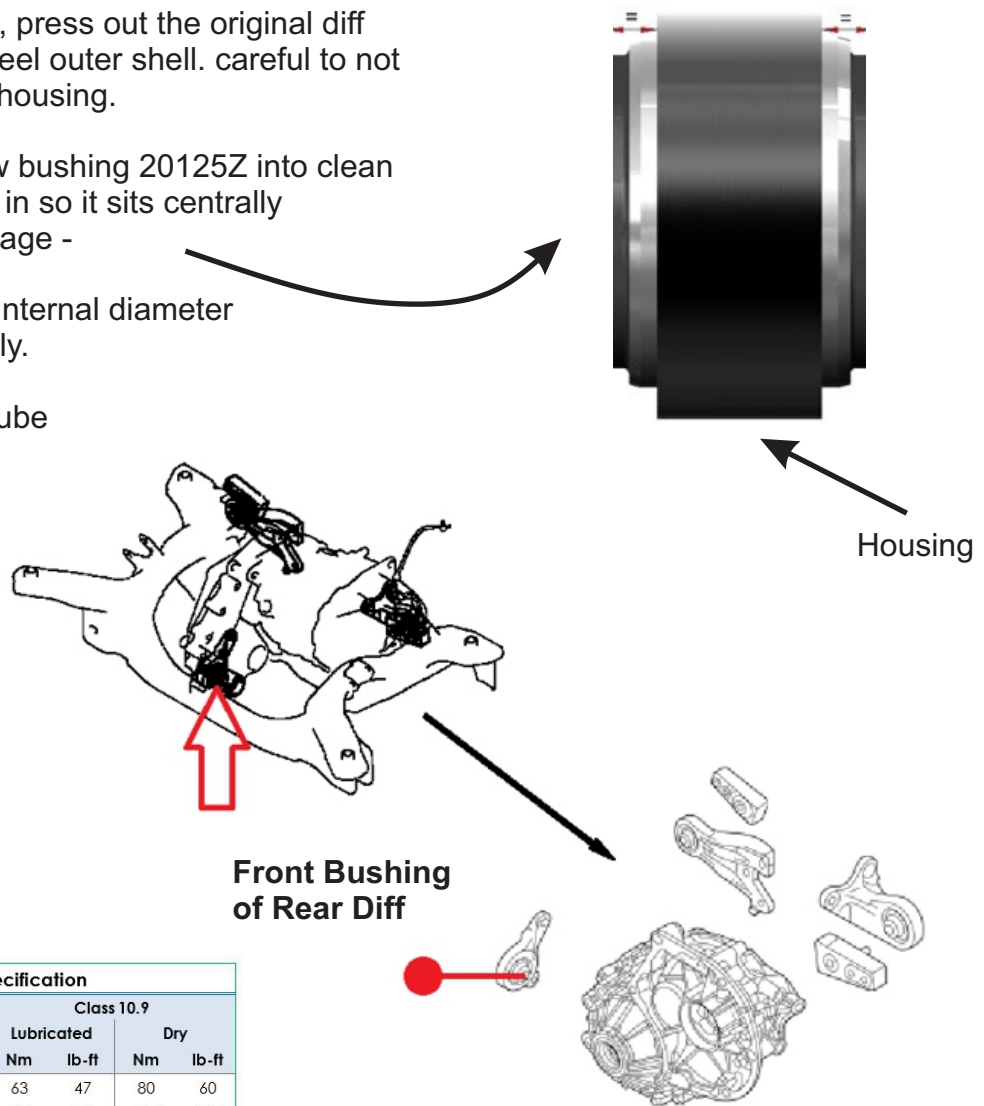

General Torque Specification						
Size	Class 8.8				Class 10.9	
	Lubricated		Dry		Lubricated	Dry
	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft
M10	43	32	55	40	63	47
M12	75	55	95	70	110	80
M14	120	88	150	110	175	130

Note: These components must be fitted by a qualified person only, as per the manufacturers service manual. Also, that all relevant safety procedures are followed in addition to above.