

Install Guide Page 1 of 3 Front Differential Mount - Bushing Kit

Application - Ford Ranger PY / P703 - 2022-on

(always refer current catalogue listing)

Contents - 1x bushing 3797

- 2x bushing 3798
- 2x bushing 3801
- 1x alloy centre pin
- 1x steel tube 50mm
- 1x steel tube 64mm
- 2x washers
- grease

• Raise vehicle evenly and safely support.

Never rely on a Jack only


- Remove the under-tray and support the front diff with an adjustable stand or similar:
- Remove the bolts holding the front 2 diff bushings in.
- Remove the 2 bolts on the rear position bracket that attach the bracket to the diff.
- Lower the diff down as far as possible to allow access to the bushings.

Rear Diff Bushing (requires 1x 3797 bushing and 1x alloy centre pin)

- The centre pin is attached to the chassis by 1x bolt and 1x nut, remove these so the bracket can be removed from the car.
- Once removed, mark the orientation of the flat section of the centre pin (see image below).
- Using appropriate press tolls, remove the OE bush from the bracket housing.
- Remove any burrs or debris from the housing.
- Apply grease to the ID of the housing and press the new bushing labelled "3797" into the housing.
- Apply more grease to the inside of the bushing, then align the alloy centre pin with the timing marks made earlier.



Note - It is recommended that a licenced workshop or tradesperson carry out the below procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

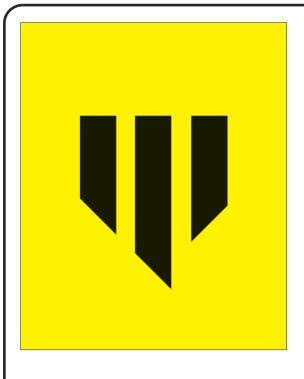

Install Guide Front Differential Mount - Bushing Kit

Front Left Diff Bushing - (Requires 2x 3798 Bushings, 1x 64mm Crush Tube and 2x Washers)

- Remove the bracket from the chassis to gain additional room around the bushing. This is done by removing the 3 bolts that attach to the chassis.
- Using appropriate press tools and booker rod, the OE bush can be pulled out of the housing.
- Clean out the bore to remove any burrs or debris.
- Apply grease to the bore of the housing and install the 2x '3798' bushes, one from each side.
- Apply more grease to the bore and flanges of the 2x bushes before pressing the 64mm crush tube into the bushes.






- Re-install the diff mount back into the bracket, ensuring that one of the washers is placed on each side of the crush tube between the bracket flanges.
- Using the OE bolt, tighten down the diff mount and the bracket to factory specifications. Leave the bracket dis-attached from the chassis until all other bushes have been replaced.

Refer Page 3 for Front Right Bushing -

Note - It is recommended that a licenced workshop or tradesperson carry out the below procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

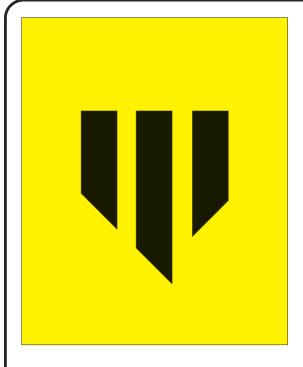


Install Guide Front Differential Mount - Bushing Kit

Front Right Diff Bushing - (required 2x 3801 Bushings and 1x 50mm Crush Tube)

 Lower the RH side on the diff down enough to press the OE bushing out. The other option is to cut out the centre tube and rubber and then cut the shell to make removing the shell easier. Refer below images -



 Once the OE bushing is removed, clear up the bore of the housing to remove any burrs or debris.

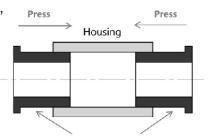



- Apply grease to the housing and install the 2x '3801' bushings.
- Apply grease to the ID of the bushungs and install the 50mm long crush tube.
- Now that all 3 bushes have been replaced, the diff can be re-installed.
- For the front right, re-use the OE washers and bolts.
- Bolt the front right bracket back onto the chassis.
- Ensure that all fasteners are torque according to the manufacturer's settings.
- Recheck all bolts after 1000km or 1 month.

Note - It is recommended that a licenced workshop or tradesperson carry out the below procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

