


## LOWER CONTROL ARM

1. Support vehicle and remove control arm and torque arm as recommended in the workshop manual
2. Remove support extension shaft from control arm and discard inner steel tube from the rubber bush. Remove rubber from centre of the control arm making sure to leave outer steel sleeve from the rubber bush intact in the arm. Clean all rubber deposits from inside the sleeve and hone with abrasive tape to a smooth finish.
3. Slide washer supplied in the kit on to the support extension shaft and then press bush on to the nose of the shaft until it locks washer against the stepped shoulder of the shaft.
4. Lubricate the inside of the steel sleeve and install assembled bush and extension shaft into the control arm. Completely reassemble as shown in the workshop manual.

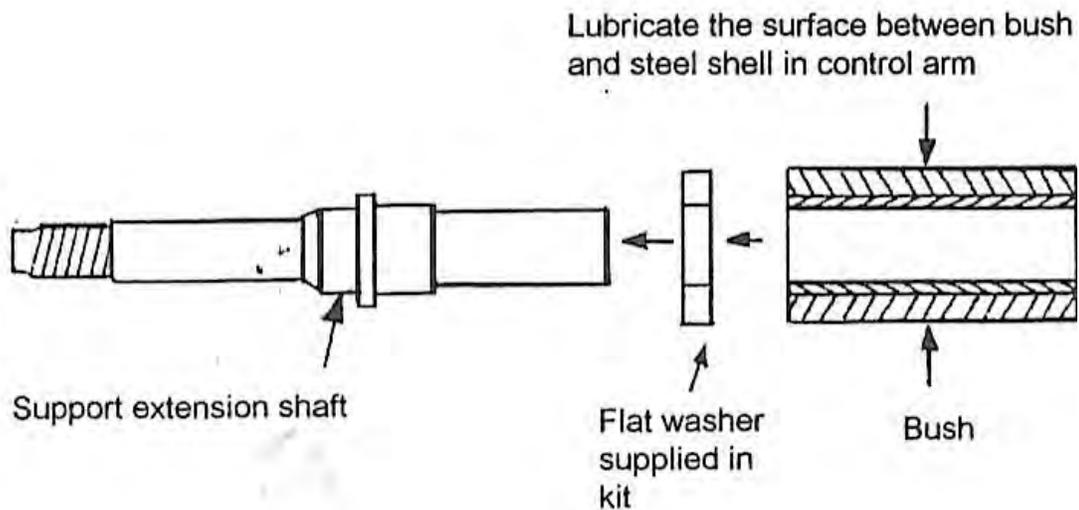

This procedure must be carried out by a qualified person