

Instructions Front Control arm & Radius Arms - Caster Adjustable

This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application - BMW F Series exc M3

Always refer complete catalogue listing

- Adjusting spanner

- Grease

- 2x Radius arms (live adj poly bushing)

WHITELINE performance control arms **Contents** - 2x Control arms (spherical bearings) offer quality replacement arms with low compliance, live adjustable radius bushing giving the ability to easily improve caster settings for disability and/or improved turn in at speed.

WHITELINE recommends confirming wheel alignment settings prior to disassemble.

• Raise vehicle evenly and safely support.

Never rely on a Jack only

- Proceed to un-bolt front wheels.
- Remove inner mounting bolts, followed by ball joint nut.

There should be no need to hit aluminium hub to remove ball joint.

- Take note of arms when removing they are LH and RH.
- Note some models have head light sensor refer RH image. Be careful not to damage
- Grease radius bushing face and internal diameter with supplied grease only.

Refer page 2

It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.



Instructions Front Control arm & Radius Arms - Caster Adjustable

BMW F Series Front Suspension



• Push in supplied adjusting tube so that the hex is closer to rear of car. Refer LH image.





Tighten inner front bolt to 75Nm Tighten ball joint stud to 120Nm

• A wheel alignment is required immediately after install - to correct any Toe issues.

Note RH image for basic caster guidance

Re-check all bolts after 500kms

FIG3 (Below) Adjustment Alignment



Strong Pull Left (for a vehicle driven on the left hand side of the
Front of vehicle
Front



Performance settings (approx. 1 degree change)



It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.