

Instructions

Front Control Arm Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Install Guide

- Raise vehicle evenly and safely support.

Never rely on a Jack only

- Remove front wheels and proceed to un-bolt front control arms. It is suggested to remove and service one arm at a time.

Note - a hydraulic Press will be required to replace bushings
Do not remove the lower shock bushing unless purchased also

- Press out original bushings including steel outer shells.
- Clean Eyes well from any grease or dirt.

Note - use soapy water and flat surfaces to push new bushings in.


- Grease bushings with supplied grease only.
- Use tube 38mm long for upper arm
Use tube 52mm long for lower arm.
- Tighten original bolts to 50-60Nm
- a wheel alignment is recommended soon after install.

Application - Honda/Acura Integra
 - 1990-1993


Always refer complete catalogue listing

Contents - Bushing 91444 x 4
 - Bushing B2006 x4
 - Steel tube 19x10x38 x4
 - Steel tube 16x10x52 x2
 - Grease


Upper Arm

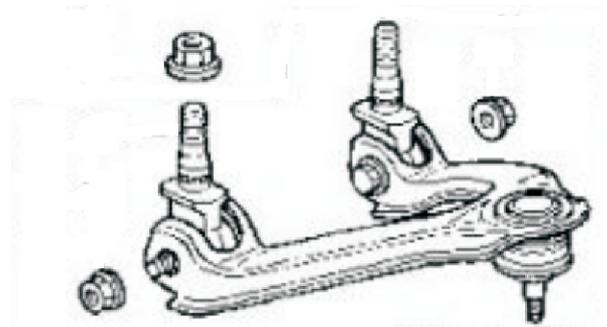

Lower Arm

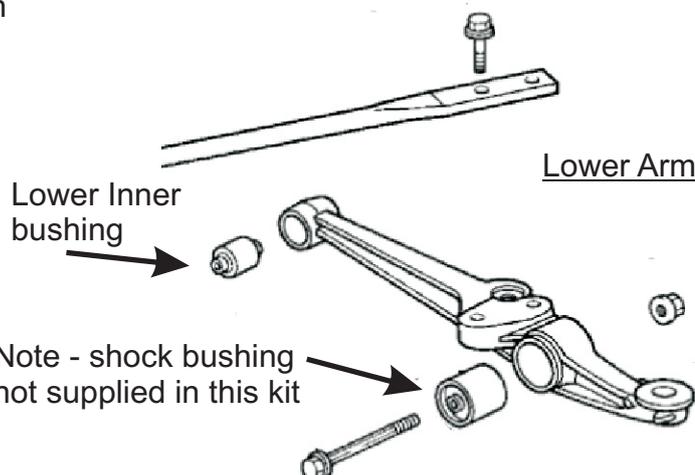

Grease bushing face and internal diameter

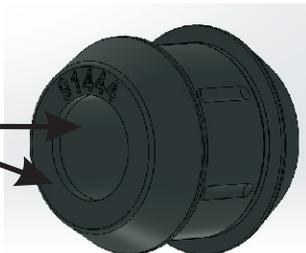

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.