 
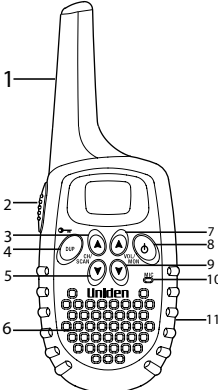 
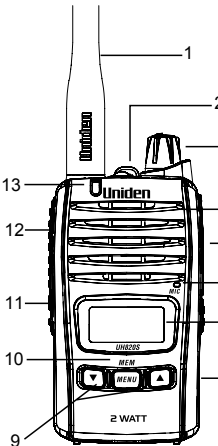 


Uniden®

 
Uniden UHF Handheld and CB Radio Troubleshooting

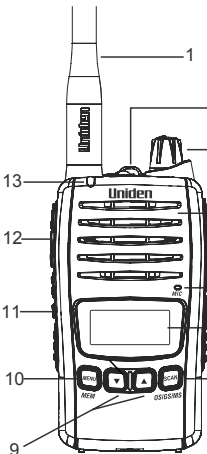

Model	Controls & Indicators	Reset Procedure
UH35		
 <p>Diagram of the Uniden UH35 handheld radio. The diagram shows the following components labeled with numbers 1 through 14: 1. Antenna, 2. PTT (Push-To-Talk) Button, 3. Channel/Scan up Key, 4. Duplex/Keylock Key, 5. Channel/Scan down Key, 6. Speaker, 7. Volume up/Mon (monitor) Key, 8. Power On/Off Key, 9. Volume down/Mon (monitor) Key, 10. Microphone, 11. Battery Compartment Door, 12. Channel Indicator, 13. Battery Low Indicator, 14. Transmit Indicator.</p>	<ol style="list-style-type: none"> 1 Antenna 2 PTT (Push-To-Talk) Button 3 Channel/Scan up Key 4 Duplex/Keylock Key 5 Channel/Scan down Key 6 Speaker 7 Volume up/Mon (monitor) Key 8 Power On/Off Key 9 Volume down/Mon (monitor) Key 10 Microphone 11 Battery Compartment Door 12 Channel Indicator 13 Battery Low Indicator 14 Transmit Indicator 	<p>Turn the unit off, Press and hold "[channel ▲] and [vol▲]" buttons together at the same time and turn the power back on. After 15 seconds turn power back off, then turn on.</p>
UH820S		
 <p>Diagram of the Uniden UH820S handheld radio. The diagram shows the following components labeled with numbers 1 through 13: 1. Antenna, 2. SCAN/MON, 3. Rotary Vol/Power Knob, 4. Speaker, 5. Accy Speaker MIC Jack, 6. Microphone, 7. LCD Display, 8. USB Charge Port, 9. UP and DOWN Keys, 10. MENU[MEM] Key, 11. SMART Button, 12. PTT (Push-To-Talk) Button, 13. LED.</p>	<ol style="list-style-type: none"> 1 Antenna 2 SCAN/MON 3 Rotary Vol/Power Knob 4 Speaker 5 Accy Speaker MIC Jack 6 Microphone 7 LCD Display 8 USB Charge Port 9 UP and DOWN Keys 10 MENU[MEM] Key 11 SMART Button 12 PTT (Push-To-Talk) Button 13 LED 	<p>Turn the unit off, Press and hold "MENU"& "Smart" buttons together at the same time and turn the power back on. After 15 seconds turn power back off then on.</p>

Model	Controls & Indicators	Reset Procedure
UH850S		
 <p>A line drawing of a Uniden UH850S handheld radio. The radio is shown from a front-three-quarter view. It has a long antenna at the top, a rotary knob below it, and a speaker grille. Below the grille is a microphone and a small LCD display. At the bottom are several control buttons. Numbered callouts point to the following parts: 1. Antenna, 2. MON/Keylock, 3. Rotary Vol/Power Knob, 4. Speaker, 5. Accy Speaker MIC Jack, 6. Microphone, 7. LCD Display, 8. SCAN [OS/GS/MS] Key, 9. UP and DOWN Keys, 10. MENU[MEM] Key, 11. SMART Button, 12. PTT (Push-To-Talk) Button, 13. LED.</p>	<ol style="list-style-type: none"> 1 Antenna 2 MON/Keylock 3 Rotary Vol/Power Knob 4 Speaker 5 Accy Speaker MIC Jack 6 Microphone 7 LCD Display 8 SCAN [OS/GS/MS] Key 9 UP and DOWN Keys 10 MENU[MEM] Key 11 SMART Button 12 PTT (Push-To-Talk) Button 13 LED 	<p>Turn the unit off, Press and hold "MENU" & "[▲]" buttons together at the same time and turn the power back on. After 15 seconds turn power back off then on.</p>

UH9000

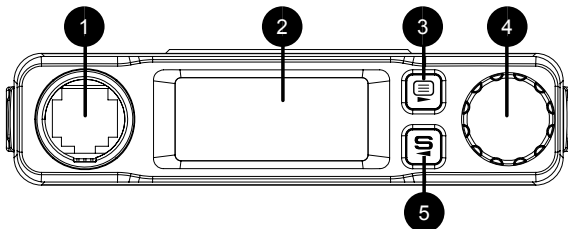Controls & Indicators



 
- 1 MIC Jack
- 2 Liquid Crystal Display (LCD)
- 3  Menu Button/Monitor function (press & hold)
▶ - Move Selection
- 4 PUSH control - Volume/Channel Select (press)/Power On/Off (press & hold)
ROTARY control - Volume/Channel /Menu Item Selector
- 5  Channel Scan button/Scan Memory (press & hold)
◀ - Move Selection

Reset Procedure

Turn the base off, Press and hold "MENU" & "SCAN" buttons together at the same time and turn the power back on. After 15 seconds turn power back off then on.

UH9060/UH9080

Controls & Indicators

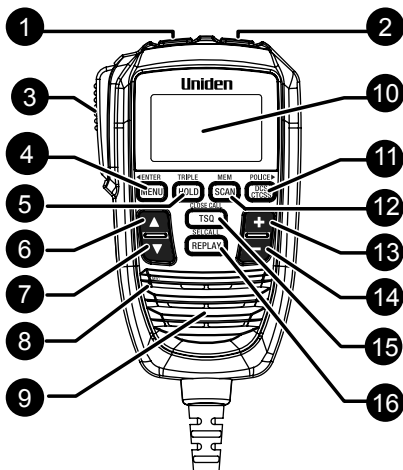

- 1 **POWER** - Power Button
- 2 **SMART** - Multiple Function
- 3 **PTT** - Push To Talk Button
- 4 **MENU** - Menu Button/
/ENTER - Enter Button
- 5 **HOLD** - Hold Button
/TRIPLE - Triple Watch Button
- 6 - Channel Up Button/Select Up Button
- 7 - Channel Down Button/Select Down Button
- 8 **MICROPHONE**
- 9 **SPEAKER**
- 10 Liquid Crystal Display (LCD)
- 11 **DCS/CTCSS** - DCS & CTCSS Button
/POLICE - Police/CB/Fire Button¹
- 12 - Move selection right
- 13 **SCAN** - Scan Button
/MEM - Memory Button
- 14 - Volume Up Button
 - Volume Down Button
- 15 **TSQ** - Tone Squelch Channel
/Close Call - Close Call Button¹
- 16 **REPLAY** - Replay Button
/SELCALL - Selective Calling Button

¹ This feature applies to UH9080 only

Reset Procedure

• Initialize to factory setting not including recorded audio.

Turn the unit off, Press and hold "MENU"& "REPLAY" buttons on the MIC together at the same time and turn the power back on. After 15 seconds turn power back off then on

• Reset All including recorded audio.

Turn the unit off, Press and hold "MENU"& "Replay" & "DCS/CTCSS" buttons together on the MIC at the same time and turn the power back on. After 15 seconds turn power back off then on.

Other Troubleshooting Guide

No TX

1. For CB mobile, after reset, check the external speaker MIC, if MIC is defective, simply order the speaker MIC from Uniden Spareparts, email spareparts@uniden.com.au, hotline 1300366 895. If not, please send unit back for repair.
2. For handheld, after reset, if still not working, please send it back for repair.

No RX or Poor RX

After reset, if it is still unable to receive active channels, please send unit back for repair.

Low Transmit Power

Transmitting output power for all CB mobile radios are 5W, but TX power for handheld radios are from 0.5W to 5W, for 5W radios, they have three levels of TX power, "Low, Medium and High", please select high power to extend the range. Otherwise, send back for repair.

No TX audio

1. For CB mobile, check the speaker MIC, if SpeakerMIC is defective, simply order the speaker MIC from Uniden Spareparts, if not, please send unit back for repair.
2. For handheld, please send it back for repair.

No RX audio

Send unit back for repair.

Not scanning

After reset, if it is still unable to scan, please send unit back for repair.

No LCD

Send unit back for repair.

Buttons/ PTT button Malfunction

Send unit back for repair.

Battery not charging (handheld only)

1. Check the AC adaptor and desktop charger or cigarette car charger.
 2. Check the battery.
- If any of the above items is defective, please email or call our Spareparts to order.

Battery not hold charging (handheld only)

Order battery from Uniden Spareparts.

Antenna Malfunction

If Antenna Rib is broken, you can order it from Uniden Spareparts. Others, we would suggest the customer to go to antenna specialist to check the performance with specification.