## Instructions Steering Rack Mount Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Note - these bushings can be replaced while Steering Rack is in vehicle.

**Application:** Toyota Tundra

Kit Contents: 4x Bushings

4x Tubes 4x Washers



Gain access to under flange with chisel

## Install Guide

- 1. Raise vehicle evenly and safely support.
- 2. The steering wheel will need to be locked in the straight-ahead position.
- 3. Remove wheels and disconnect Tie Rods from hubs.
- 4. The pinion/intermediate shaft will need to be disconnected also.
- prior to doing this, mark the shaft to ensure correct alignment on re-assembly.
- 5. Un-bolt the 2 Rack bolts do not attempt to loosen the nuts they will not turn.
- 6. Push the Rack to one side to help access to bushings. The complete bushing will need removing including outer steel shell.
- 7. A chisel will be required to remove the first bushing you may be able to gain access under flange with a ball-joint fork.
- 8. Once bushings are removed, place supplied bushing in place, followed by supplied tube and washers.
- 9. Tighten Rack mounting bolts and pinion/intermediate shaft bolt to manufacturers specifications only.
- 10. Carry out a wheel alignment prior to driving.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.