## Fitting Instructions #4736S

## **Ford Mustang**

## **Rear Control Arm Lower Inner Front Bushing**

*Note:* Polyurethane bushings must be fitted to both sides of the vehicle.

- o Wheel-align the vehicle before the job is started and note settings;
- Jack the vehicle up and support on jack stands/hoist and remove the rear lower control arm;
- Remove original shell parts from the housing with the use of a hydraulic press and suitable pressing tools;

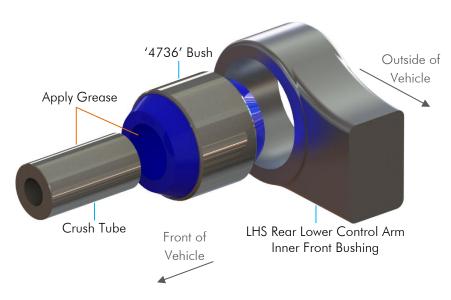


Figure 02 - '4736' bushing installation





Figure 01 – Left Hand Side Lower Control Arm Inner Front bushing

- o Press the '4736' bush into the housing until the shell is flush to the surface of the arm;
- Generously lubricate the outside of the crush tube and inside of the bush, then push the crush tube in the bush;
- o Repeat the procedure for the other rear lower control arm;
- o Refit the control arms to the vehicle and tighten all bolts to manufacture's torque settings and carry out wheel alignment.