


THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

227

$\varnothing 22\text{ mm}$   
DRILL 4 PLACES

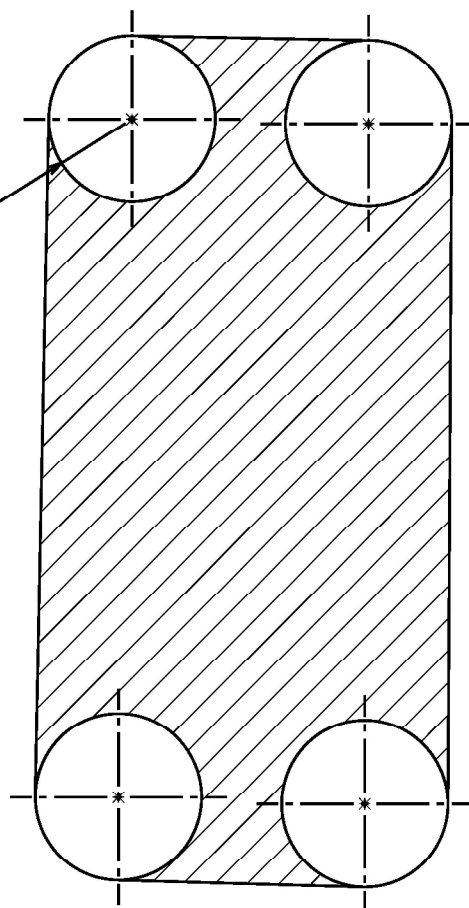

### TEMPLATE STEPS - LEFT HAND SIDE - SUV

1. ENSURE ALL DIMENSIONS ARE TO SCALE BEFORE PROCEEDING
2. CUT TEMPLATE OUT AND ALIGN ON BUMPER (PAINTED SURFACE) LOWER EDGES
3. MARK CENTRE OF 22mm HOLES AND DRILL OUT USING 22mm SPEEDBORER
4. CUT BETWEEN HOLE EDGES (AS SHOWN BY HATCHED AREA) USING APPROPRIATE CUTTING TOOL SUCH AS A HAND HACKSAW

ALIGN ON EDGE OF  
BUMPER COVER LOWER EDGES

176

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK