



All Weather Rubber Ute Mat - Type A

To suit: Hilux Single Cab Chassis ELA

Fitting Instructions


Accessory Part No. : **PZQ20 89060**

Installation time: 5 min. approx.

Please Install the Rubber Ute Mat in accordance with the following instructions:

Step 1. Remove the Mat from the packaging and unroll it completely. To help the mat to sit flat against the tray loosely roll the mat in the opposite direction to the way it was rolled for shipment, then unroll again.

Step 2. Fit Mat in Tray.

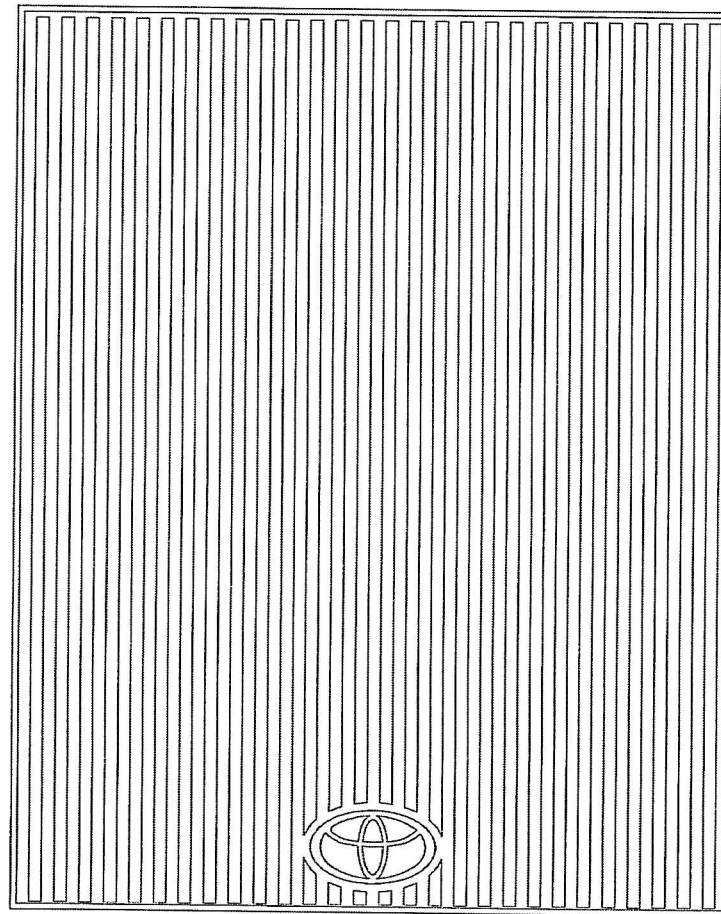

↑ **Front**