

Fitting Instructions

Control Arm Bush

Code: Z5507

Application:

Nissan Xtrail 10/01 - 9/07

Kit : Front arm rear bush.

Always refer to current catalogue for complete application listing.

OFFSET ARRANGEMENT

For maximum caster gain, place the bush as per below, pushing the control arm towards the outside of vehicle.

The supplied steel crush tube is to be pressed on to the alloy control arm.


LH SIDE

RH SIDE

Example 1

Left side
caster gain


Standard bush

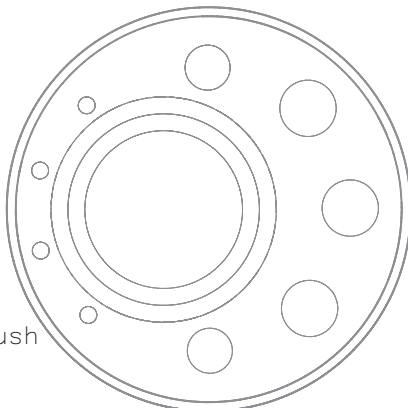

Example 2

Right side
caster gain



Standard bush

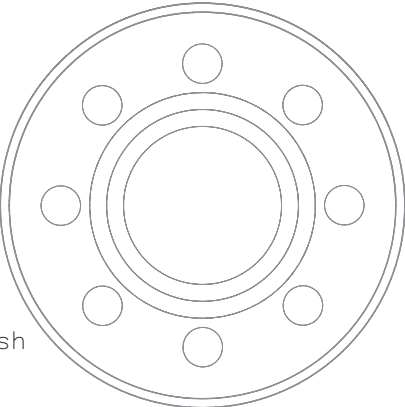


Example 3

LH and RH
caster gain


Offset bush

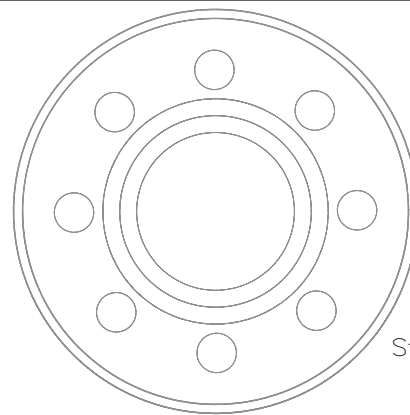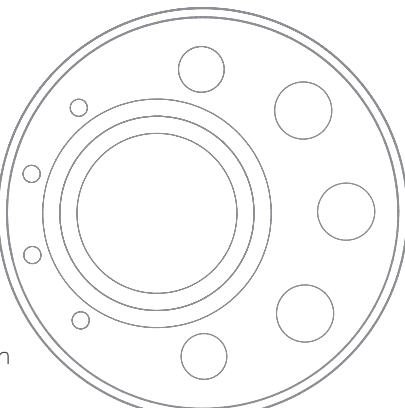

Standard bush

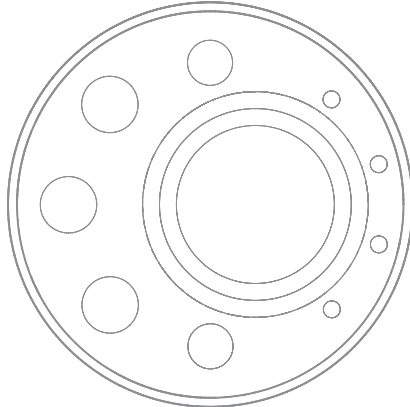

Offset bush

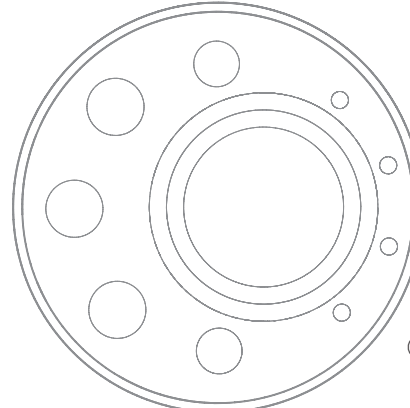

Offset bush

Warning: Please drive carefully while you accustom yourself to the changed vehicle behaviour.