

# Installation Guide


## Rear Toe Link Inner Bush Kit - IRS only

Z 5041

Suits: Falcon AU - IRS only

*(Always refer to the current catalogue for complete application listings)*

**N.B:** This installation guide should be used in conjunction with the workshop manual.  
All fastener torque settings should be adhered to.

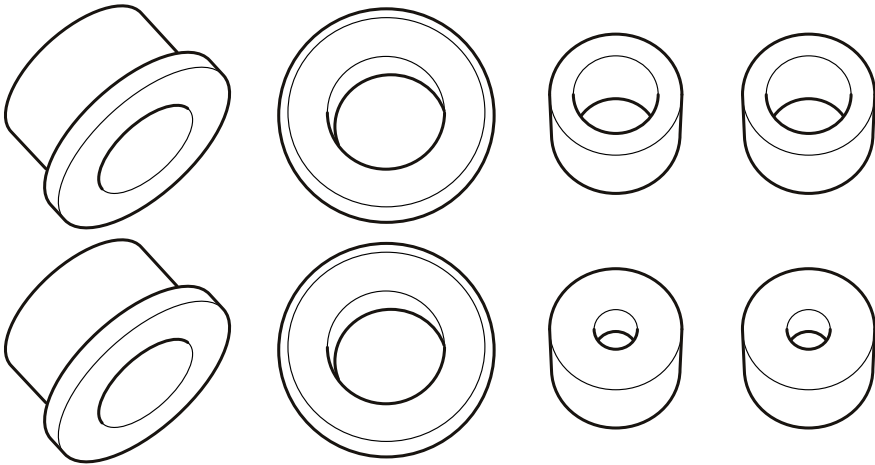

4 x BUSH 6246

2 x TUBE ID 12.2 mm = USE WITH 12mm OD BOLT

2 x TUBE ID 9.1 mm = USE WITH 9 mm OD BOLT

**NOTE:** 1 SET OF SUPPLIED TUBES WILL NOT BE USED

**N.B:** It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.