


FITTING INSTRUCTIONS

Sway Bar to Wishbone

Suits: **Ford Capri 5/69-4/74**
 Ford Cortina MKII 3/65-8/71
 Ford Escort MKI-II

N.B: These instructions should be used in conjunction with workshop manual.

1. Support the vehicle and remove the front sway bar by undoing end nuts and sway bar mount brackets.
2. Cut away old rubber bushes from the arm and remove crush tubes from the sway bar. Clean and rubber deposits from wishbone eye.
3. Install bushes and sway bar taking particular attention to lubricating the bushes internal bores and flange faces.
4. Reassemble and tighten all components to manufactures workshop manual & torque settings.
5. Wheel align and road test vehicle.

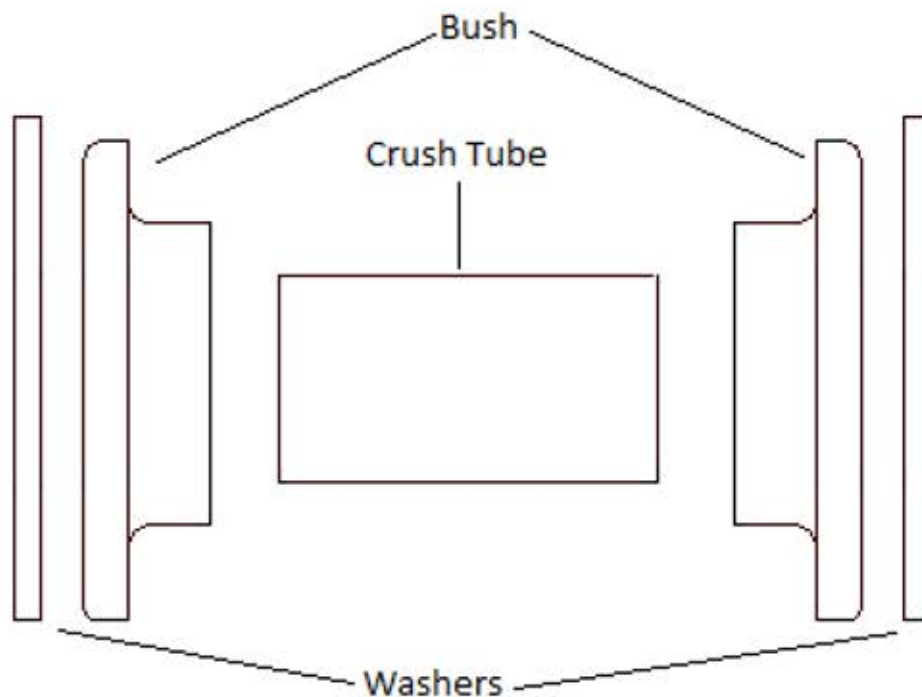

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.