


# Fitting Instructions

1. Support vehicle, disconnect ball joint and remove lower wish bone and pivot pin as an assembly.
2. Strip pivot pin and press old rubber bushes and shells from arm. Clean all components of old rubber deposits, rust etc, and inspect for damage and cracking.
3. Press bush "A" into wishbone and install pivot pin taking care to install both thrust washers supplied on the pivot pin nearest the mounting bracket (refer to drawing). Once the pivot pin is installed fit bush "B" into wishbone. Lubricate ends of both bushes at contact areas with washers.
4. Complete assembly and reinstall in vehicle as recommended in workshop manual.

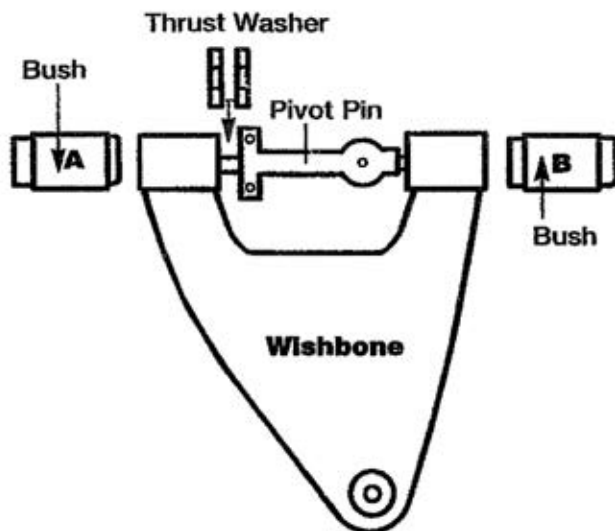

**Note:** It is recommended that the above procedure is carried out by a licensed workshop or tradesperson