

FITTING INSTRUCTIONS


Suits: Toyota Hiace SBV all models

Kit Contents:

6199 Bush x 1 Fitting Instructions x 1

N.B: These instructions should be used in conjunction with workshop manual.

1. Raise the rear of the vehicle and place on chassis stands. The chassis stands should be placed in a suitable position under the chassis of the vehicle and not on the differential.
2. Support the differential and remove the upper locating arm.
3. Remove the old bush with a suitable removal tool and fit replacement 6199 bush making sure that the bonded crush tube longest side is to the drivers or o/s of the vehicle and that the timing mark (refer diagram below) is in the 12 o'clock position.
4. Refit the arm and tension all bolts to manufacturers specifications at normal ride height.

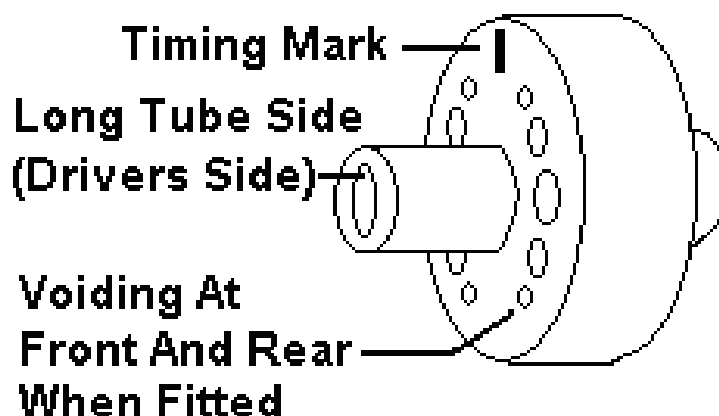

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.