

FITTING INSTRUCTIONS


Suits: EB(2/92)-AU Falcon (non IRS).

Kit contents:

Replacement 6001 Bush	x 2	Stepped Crush Tubes	x 2
Washers	x 2	Grease Satchel	x 1

N.B: These instructions should be used in conjunction with workshop manual.

1. Raise the rear of the vehicle and place the jack stands under the chassis. Support the differential so as to be able to remove the rear lower control arm.
2. Remove the lower trailing arm, remove the old bush with an appropriate removal tool.
3. Lubricate the bush and the eyelet with soapy water only. Press in the new 6001 replacement bush with the small flange to be pressed through the eyelet and to finish facing to the centre of the vehicle when refitted. (As per diagrams below).
4. Fit the stepped crush tube with the step to the thin flange end (centre of the vehicle).
5. Fit the washer over the step on the crush tube and refit the arm to the vehicle.
6. Tension all removed suspension components to manufacturers specifications at normal ride height.
7. For other bush positions please repeat step 1-6.

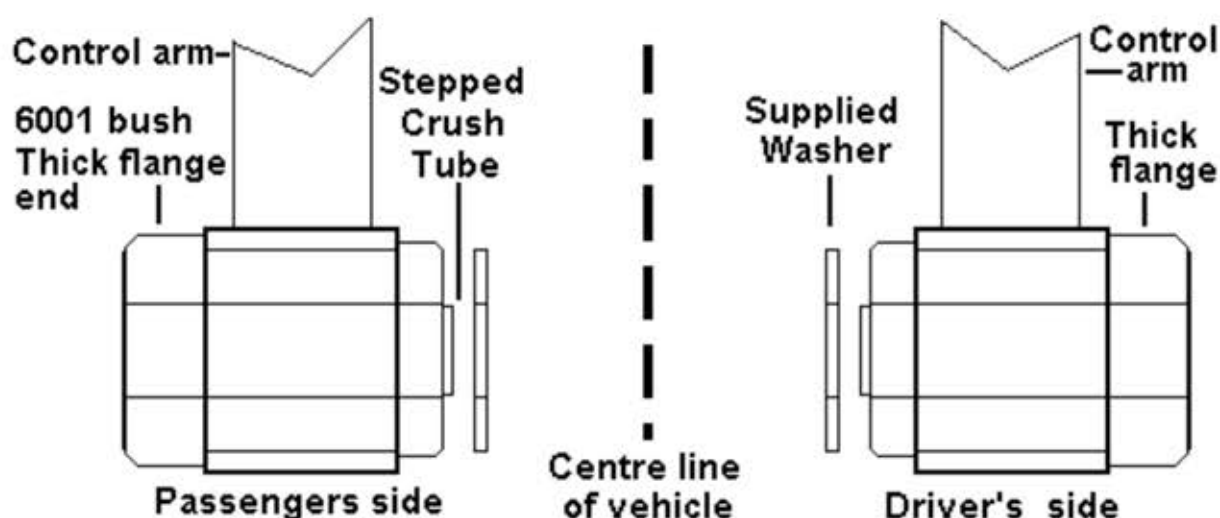

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.