
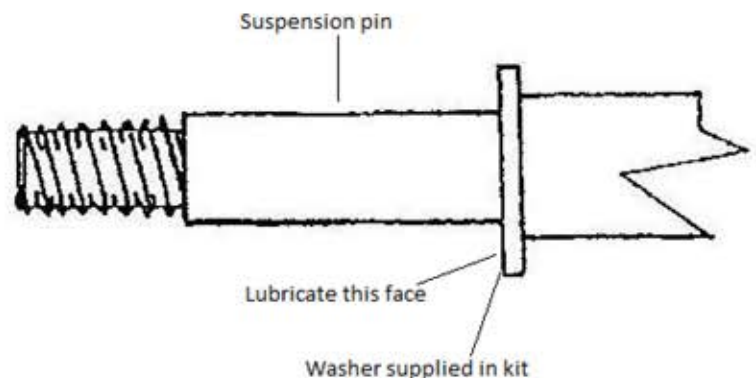


Fitting Instructions

Control Arm Bushes

N.B: These instructions should be used in conjunction with workshop manual.

1. Support the vehicle and disconnect the ball joint.
2. Remove the control arm from the vehicle.
3. Press out shelled bushes from both eyes in the arm.
4. Before fitting new bushes install flat washers supplied against shoulders at each end of the pivot pin.
5. Fit shelled bushes and press to **swage mark** on bush shank - **Take care to support the arm around each eye to minimise damage to arms.**
6. Lubricate end faces of bushes with grease provided, before assembly.
7. Refit end washers and tighten locknuts after installation.
8. Reassemble suspension as recommended in workshop manual.
9. Tighten all components to manufactures recommended torque settings.

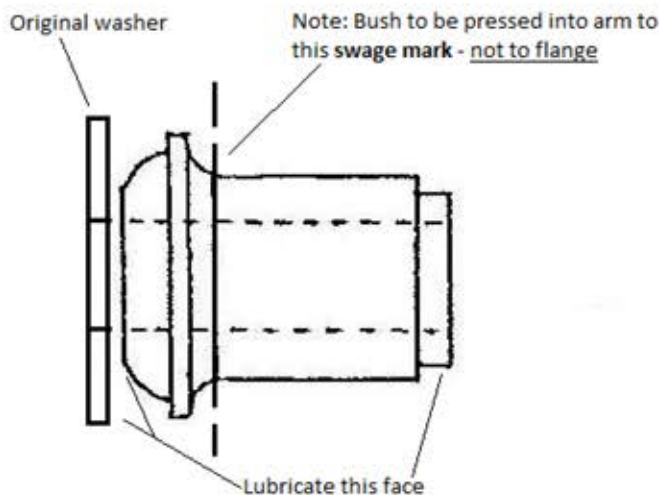

NOTE: IT IS RECOMMENDED THAT THE ABOVE PROCEDURE IS CARRIED OUT BY A LICENCED WORKSHOP OR TRADESPERSON