

HAYMAN REESE
PART No: 02995RW
LEXUS RX450H 2012 ON

INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT ALL INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT
PLACE THESE INSTRUCTIONS IN THE VEHICLE'S GLOVEBOX AFTER INSTALLATION IS COMPLETED



Installation Time: Approx **45** Mins

Towbar Installation Instructions

Towbar capacity

LEXUS RX450H 2012 ON

Part Number **02995RW**

Max Towing Braked

1500 kg

Max Static Ball Load

150 kg

Hayman Reese (Cequent)
PO Box 4050, Dandenong South VIC 3164
Phone 1800 812 017 Email info@haymanreese.com.au

HAYMAN REESE
PART No: 02995RW
LEXUS RX450H 2012 ON

INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT ALL INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT
PLACE THESE INSTRUCTIONS IN THE VEHICLE'S GLOVEBOX AFTER INSTALLATION IS COMPLETED

Warning:

1. Do not, drill, cut, weld or otherwise modify the towbar.
2. If you are using electric welding on a motor vehicle, **always** check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could **destroy** any onboard computers. If in doubt, check with the vehicle's manufacturer.

General:

1. Ensure all hardware items have been included refer to assembly diagram.
2. It is recommended that the instructions are read through and completely understood before making any attempt to fit this product.
3. Be wary of any changes to vehicle designs or other accessories that may conflict with the installation of this product.
4. Before drilling ensure that the area is clear of fuel, electrical & other components.
5. All holes drilled into the body panels shall have all burrs & swarf removed then coated with a suitable rust preventative paint.
6. The high tensile fasteners supplied with this product were used to achieve the specified rating. If replacement is required ensure that fasteners of the same rating & quality are used. Contact an authorised **Hayman Reese** dealer if further information is required.
7. Ensure that all hardware is fastened to torque list below check fasteners on regular basis.
8. Towbar load rating sticker provided with this product shall be conspicuously located on inside rear end of the driver's door. **(See diagram below)**.
9. Hayman Reese recommends that you check your tow ball to ensure that it complies with the Australian standards **AS 4177.2**.
10. **PLEASE NOTE:** It is advised to remove your lug or tbm when not actually towing so as to produce a clear view of the vehicles registration plate if obscured, and to also provide maximum available departure angle.
11. Pull Pin must be fit in down position.


Tow bar Maintenance and Care.

Hayman Reese recommends that bolt torque's, as listed below, are routinely and regularly inspected and checked for correct tension. Replace any worn or defective parts.

We recommended to remove Tow Ball Mounts (TBM's, tongues or lugs) when not being used for any considerable length of time.

So as to avoid injury, when not towing it is suggested that the tongue, Pull Pin and R-clip are removed then stored in a safe, clean and dry place, away from excessive moisture.

Hitch Pull Pins and spring "R" clips are regularly checked for proper installation. Replace any worn or defective parts.

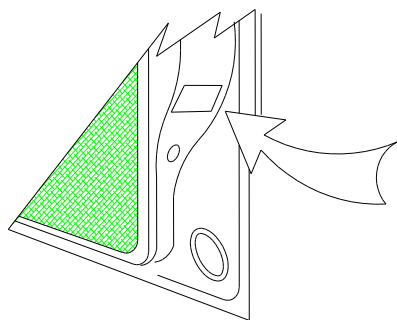

**Place load rating sticker
inside driver's door here**

**RECOMMENDED ASSEMBLY TORQUE
LISTING**

Diameter Grade 8.8 Bolt

M6	9.5 Nm
M8	21.7 Nm
M10	43.4 Nm
M12	77.3 Nm
M14	146 Nm
M16	189.8 Nm


FOR TOWING PURPOSES ONLY

For towing capacity details please refer to vehicle owner's manual or to the manufacturer. Overloading can void your warranties.


HAYMAN REESE
PART No: 02995RW
LEXUS RX450H 2012 ON

INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT ALL INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT
PLACE THESE INSTRUCTIONS IN THE VEHICLE'S GLOVEBOX AFTER INSTALLATION IS COMPLETED

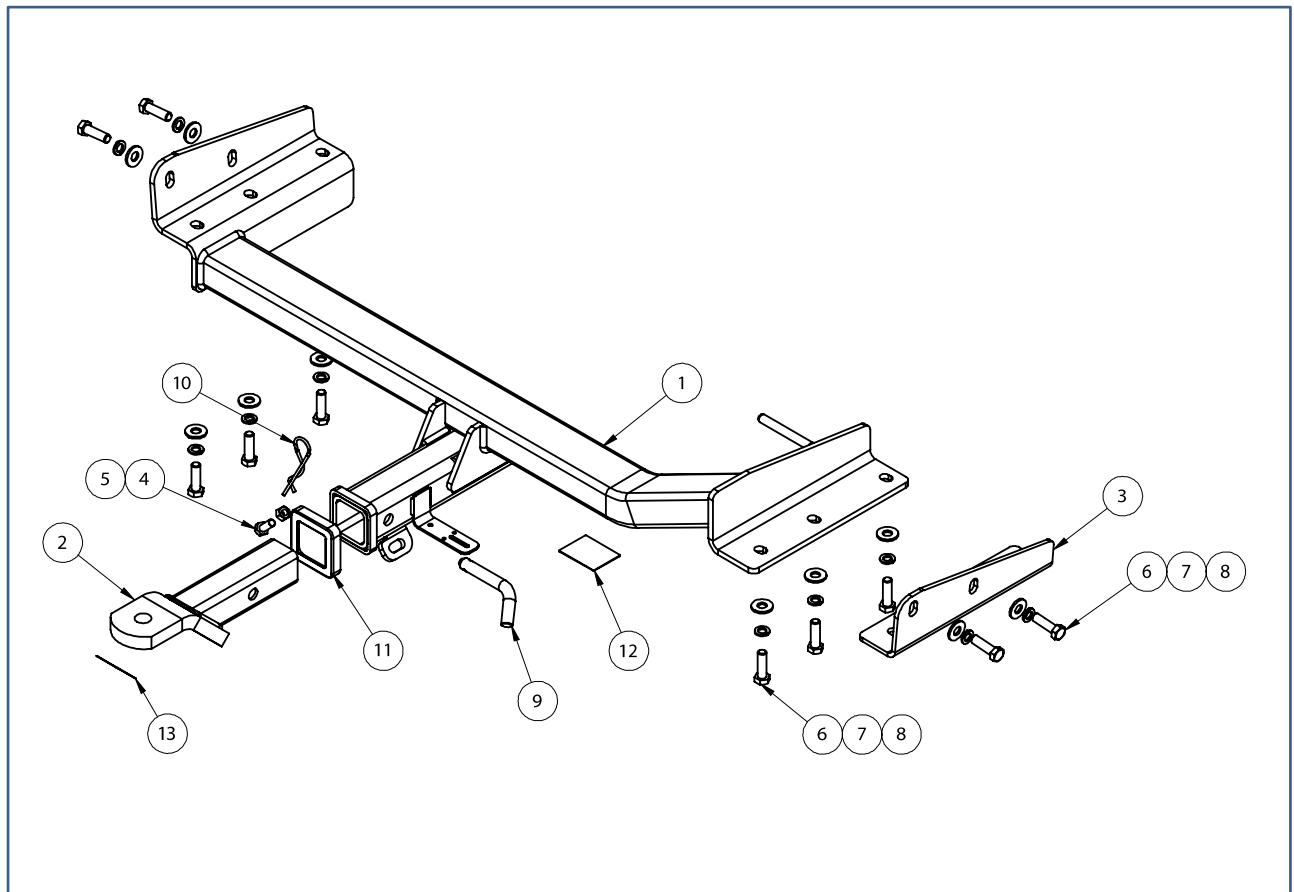


QTY.	DESCRIPTION	ITEM NO.
1	WELDED ASSEMBLY	1
1	T.B.MOUNT	2
1	SIDEARM DRIVER	3
1	BOLT M10x25x1.50P	4
1	HEX NUT M10x1.5P	5
10	BOLT M12x40x1.25P	6
10	M12 SPRING WASHER	7
10	M12 FLAT WASHER	8
1	PULL PIN	9
1	R CLIP	10
1	HITCH BOX COLLAR COVER	11
1	ACRYLIC COMPLIANCE PLATE LABEL	12
1	H.R STICKER	13

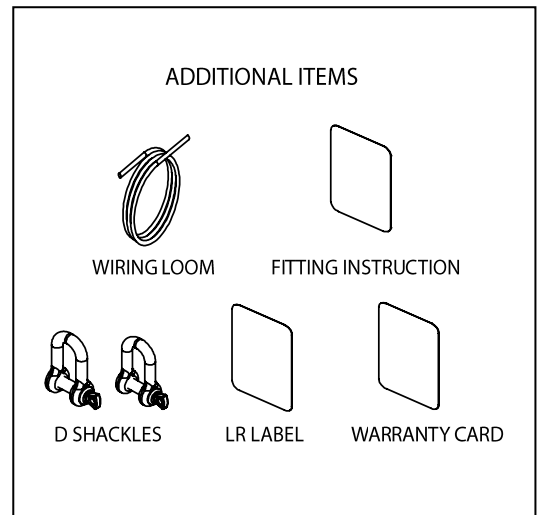

INSTALLATION INSTRUCTIONS


PLEASE ENSURE THAT ALL INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT
PLACE THESE INSTRUCTIONS IN THE VEHICLE'S GLOVEBOX AFTER INSTALLATION IS COMPLETED

1. Remove the Mud Guard by removing 3x Bolts from either sides
2. Remove the Bumper Cover by removing 4x Set Screws, 2x Bolts from behind the bumper cover; 3x Clips (1 from behind the Mud Guard on the Passenger Side); 2x Plastic Screws from the Driver Side of the body cover.
3. Remove the Driver Side Bumper Cover by removing 2x Set Screws; 2x Bolts; 2x Clips (1 from behind the Mud Guard on the Driver Side) for better access.

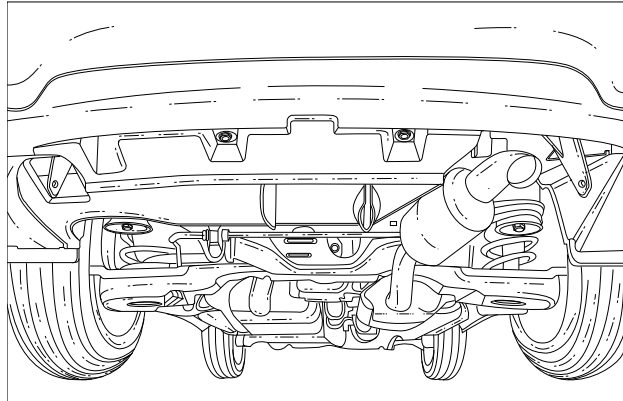


4. Remove the Shipping Hooks from driver and passenger side and discard them.

Remove the Plastic Plugs from underneath the Chassis Rail and also from the sides of the Rail.

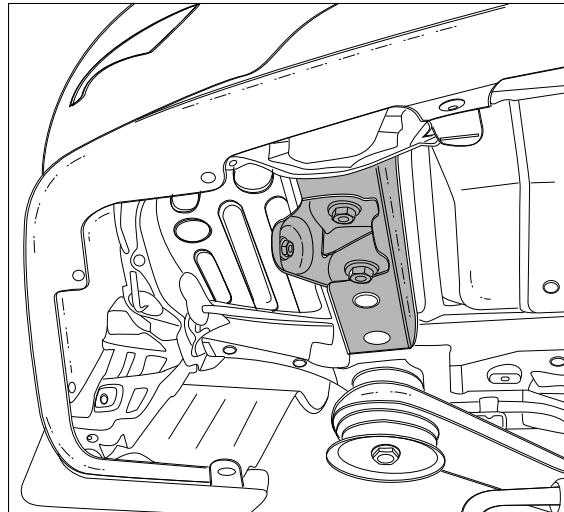


5. Remove the Muffler from the Exhaust Hook Bracket and discard the Hook Bracket.

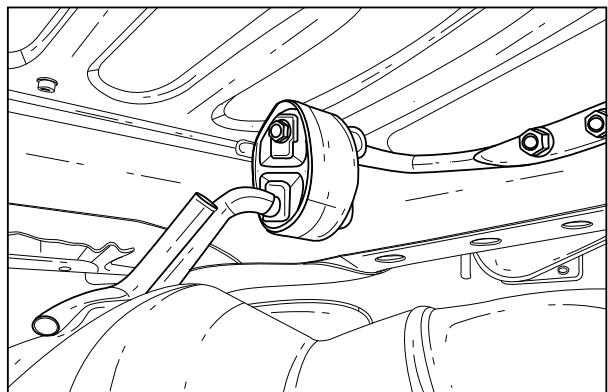


INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT ALL INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT
PLACE THESE INSTRUCTIONS IN THE VEHICLE'S GLOVEBOX AFTER INSTALLATION IS COMPLETED

6. Mount Sidearm Driver to the Chassis Rail, use 2x M12x40 Bolts with M12 Spring and Flat Washers; Mount Towbar to Passenger Side Chassis Rail, use 2x M12x40 Bolts with M12 Spring and Flat Washers; Mount the Towbar Driver Side to Sidearm Driver, use 3x M12x40 Bolts with M12 Spring and Flat Washers.
7. Torque all fasteners to specification on page 2.

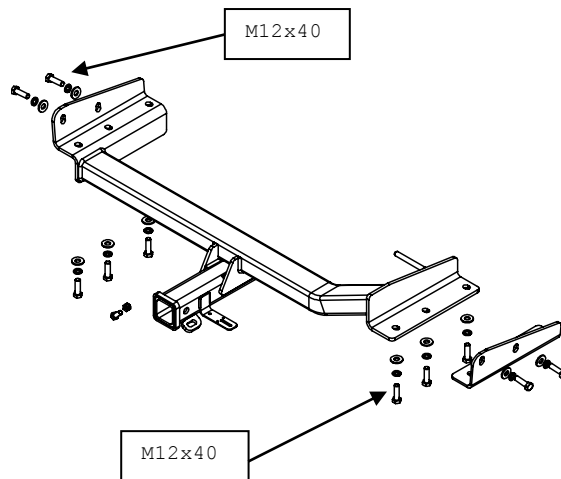


8. Cut the side of plastic under body tray 115mm wide all the way down to ribbing to allow clearance to Towbar.

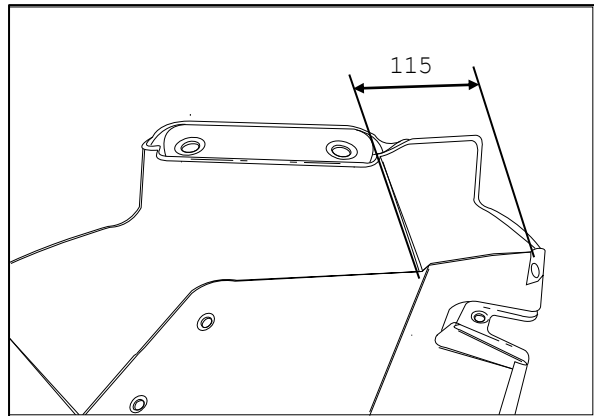

9. Using the Factory cut out section, cut 100mm wide and 270mm depth as shown.

Neatly cut out, using a saw or similar device, remove all burrs.

10. Refit the Bumper cover in reverse order.

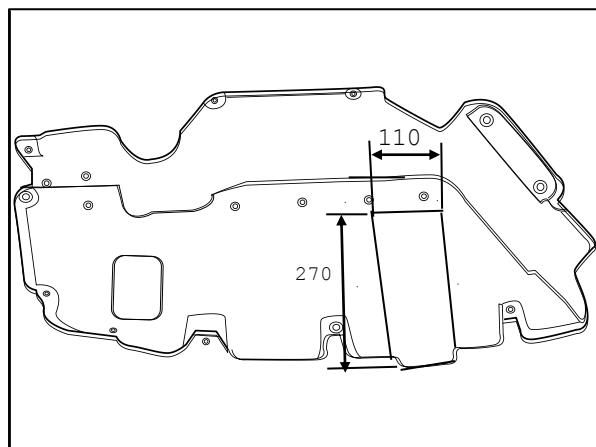

HAYMAN REESE
PART No: 100481-WL
LEXUS AL10 RX350 / RX450H
(DECEMBER '08 ONWARDS)

INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT

Wiring Loom Installation Instructions

LEXUS AL10 RX350 / RX450H
(DECEMBER '08 ONWARDS)
Part No: 100481-WL

ECU Required: 04826
Tail Harness Length Required: 1800mm

Wiring Loom Installation Time: Approx 60 Mins

Issue Date 22-02-13

Page 1

Part No: 100481-WL

Hayman Reese (Cequent)
PO Box 4050, Dandenong South VIC 3164
Phone 1800 812 017 Email info@haymanreese.com.au

www.haymanreese.com.au




HAYMAN REESE
PART No: 100481-WL
LEXUS AL10 RX350 / RX450H
(DECEMBER '08 ONWARDS)


INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT

1. In the luggage compartment, lift the floor cover (1) upwards.
2. Remove the parcel shelf.

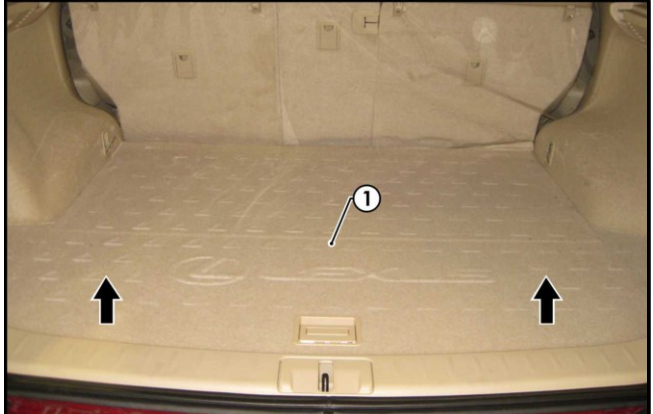


3. Remove the spare wheel cover (1).
4. Remove the LHS storage compartment (2) by first removing the 4 clips (3).
5. Remove the LHS tool tray (4).

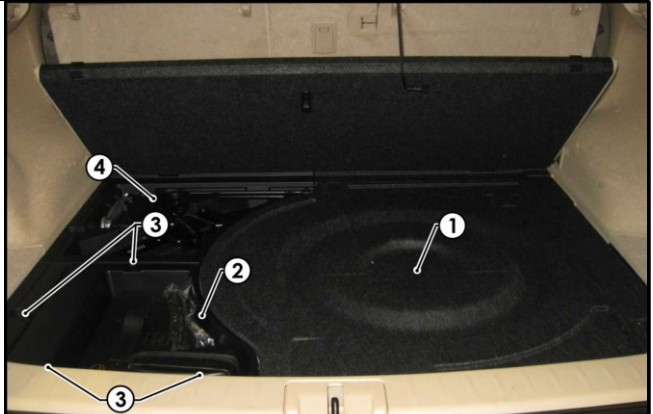

6. Remove the LHS floor cover carpet (1).

The following steps are for RX450H vehicles only. For RX350 vehicles, please proceed to Step 9.

7. Remove the rear battery cover.
8. Disconnect and remove the rear battery.

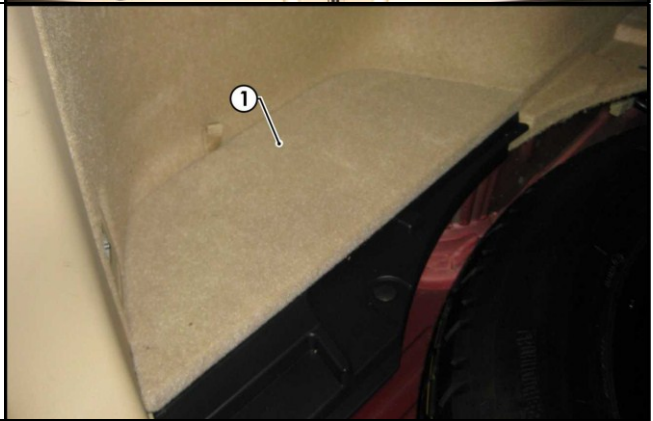

Issue Date 22-02-13

Page 2

Part No: 100481-WL

Hayman Reese (Cequent)
PO Box 4050, Dandenong South VIC 3164
Phone 1800 812 017 Email info@haymanreese.com.au

www.haymanreese.com.au




HAYMAN REESE
PART No: 100481-WL
LEXUS AL10 RX350 / RX450H
(DECEMBER '08 ONWARDS)

INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT


9. Remove the rear compartment trim (1).

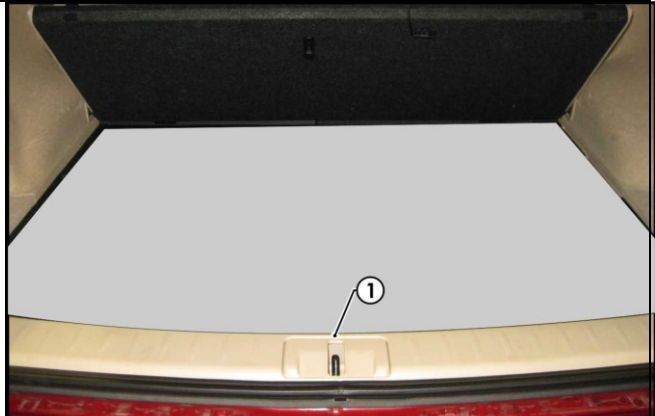

10. On the LHS of the luggage compartment, remove the LHS rear corner trim by first removing the clip (1).
11. Lift up the cover on the two cargo hooks (2) and remove the two fasteners (3).



12. Remove the two rearmost clips (1) from the LHS side trim.
13. Remove the LHS handle trim (2).
14. Remove the fasteners (3) from the LHS parcel shelf guide.
15. Remove the fasteners cap (4) and remove the fastener (5).

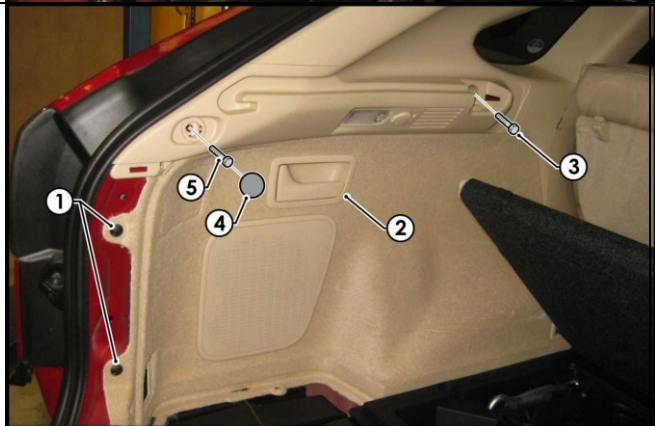

Issue Date 22-02-13

Page 3

Part No: 100481-WL

Hayman Reese (Cequent)
PO Box 4050, Dandenong South VIC 3164
Phone 1800 812 017 Email info@haymanreese.com.au

www.haymanreese.com.au




HAYMAN REESE
PART No: 100481-WL
LEXUS AL10 RX350 / RX450H
(DECEMBER '08 ONWARDS)


INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT


16. Dislodge the LHS side trim (1) and disconnect the two connectors (2).
17. Remove the three fasteners (3) from the LHS floor bracket.

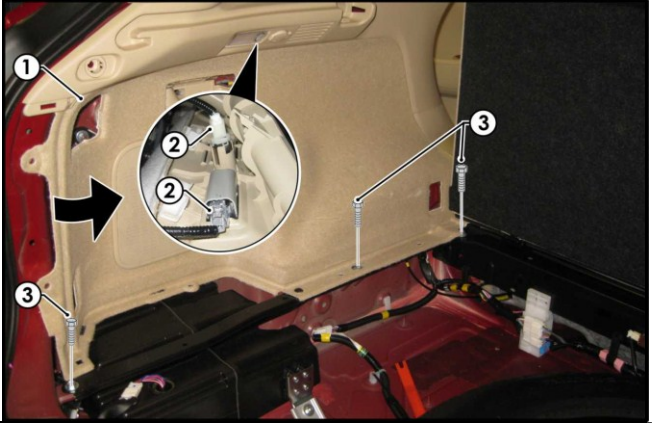

18. Remove the two fasteners (1) from the subwoofer floor bracket.
19. Remove the three subwoofer fasteners (2).
20. Disconnect the subwoofer connector (3) and remove the subwoofer from the vehicle.

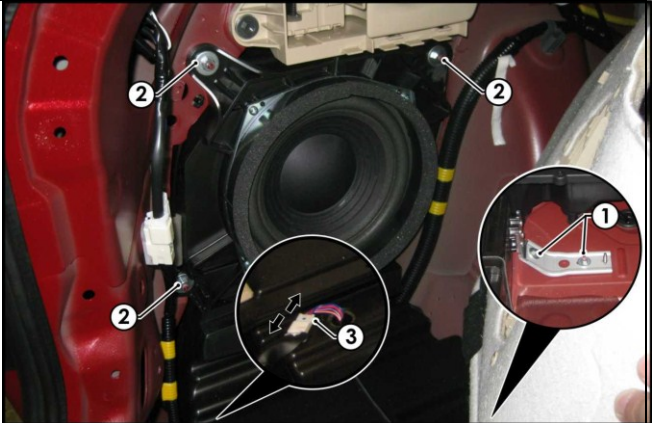

21. Drill a Ø30mm hole (1) just behind the luggage compartment grommet (2).
22. File any rough or sharp edges and spray on rust inhibitor.

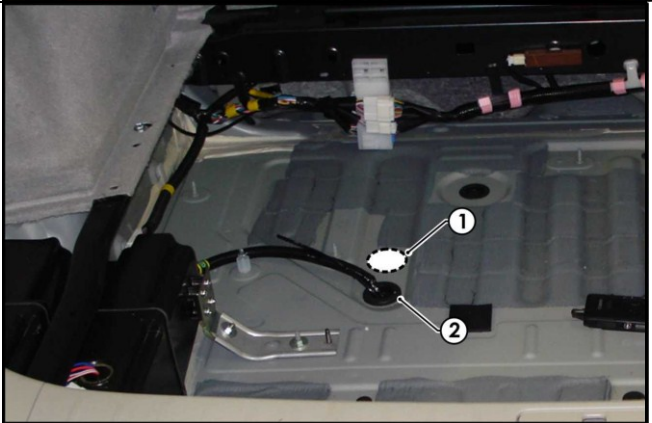

Issue Date 22-02-13

Page 4

Part No: 100481-WL

Hayman Reese (Cequent)
PO Box 4050, Dandenong South VIC 3164
Phone 1800 812 017 Email info@haymanreese.com.au

www.haymanreese.com.au



HAYMAN REESE
PART No: 100481-WL
LEXUS AL10 RX350 / RX450H
(DECEMBER '08 ONWARDS)


INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT


23. In the subwoofer cavity, locate the vehicle 12-way breakout connector (1).
24. Connect the trailer patch T-piece (2) to the breakout connector (1).

Note: If the breakout connector is occupied, disconnect and patch in between.

25. Route the trailer patch (P/No: 100481-WL) (3) towards the rear of the luggage compartment.

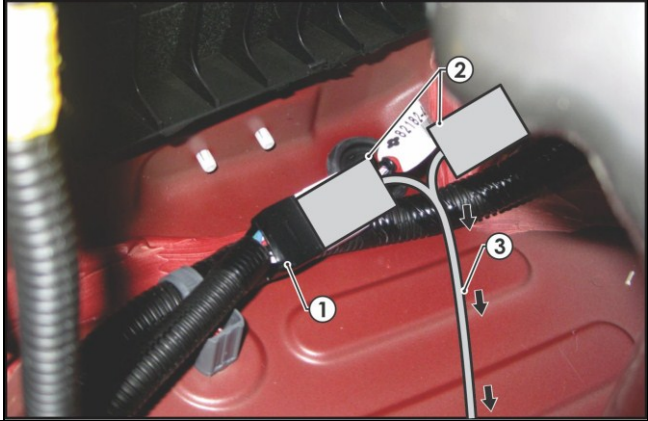

26. Connect the trailer patch 12-way ECU connector (1) to the ECU (2) (04826).

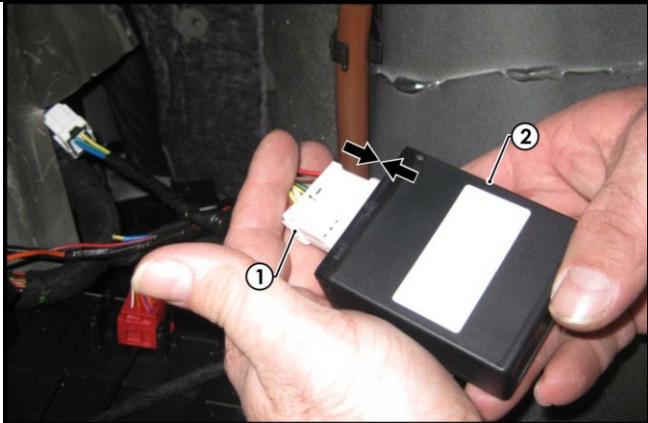

27. Apply double sided tape to the ECU (1) and adhere it to the LHS rear corner of the luggage compartment floor.
28. Ensure the ECU (1) final mounting location will not restrict the fitment of the vehicle subwoofer.



Issue Date 22-02-13

Page 5

Part No: 100481-WL

Hayman Reese (Cequent)
PO Box 4050, Dandenong South VIC 3164
Phone 1800 812 017 Email info@haymanreese.com.au

www.haymanreese.com.au




HAYMAN REESE
PART No: 100481-WL
LEXUS AL10 RX350 / RX450H
(DECEMBER '08 ONWARDS)

INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT


29. Connect the trailer patch ground ring terminal (1) to the existing vehicle earth point (2) on the rear of the luggage compartment.

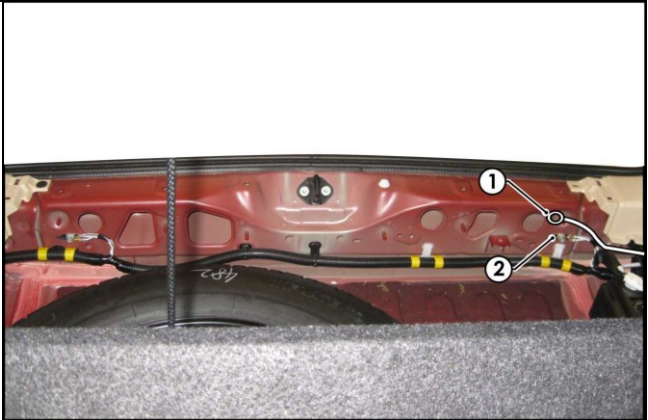

30. From the outside of the vehicle, mount the trailer socket (1) to the towbar mounting bracket using M4 fasteners (not supplied).
31. Route the tail harness (2) across the towbar towards the LHS of the vehicle and up through the previously drilled out hole.
32. Ensure the tail harness grommet is seated correctly and secure in place using a cable tie (not supplied).



33. Connect the tail harness 8-way connector (1) to the trailer patch mating 8-way connector (2).

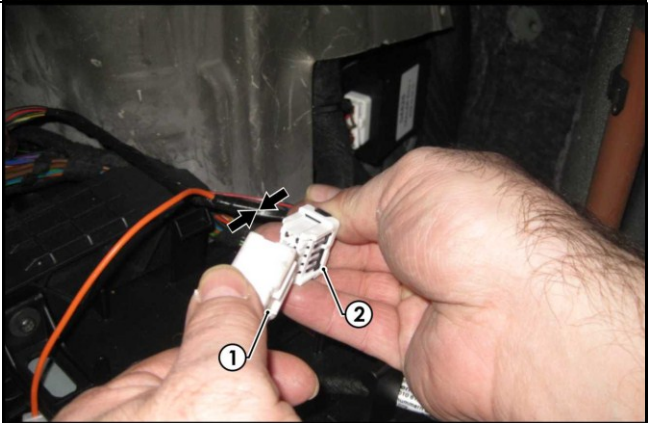

Issue Date 22-02-13

Page 6

Part No: 100481-WL

Hayman Reese (Cequent)
PO Box 4050, Dandenong South VIC 3164
Phone 1800 812 017 Email info@haymanreese.com.au

www.haymanreese.com.au



HAYMAN REESE
PART No: 100481-WL
LEXUS AL10 RX350 / RX450H
(DECEMBER '08 ONWARDS)

INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT

<p>34. Test the trailer harness function using a light board or multimeter.</p> <p>35. Secure all harnesses using cables ties (not supplied).</p> <p>36. Re-fit all removed parts and secure all fasteners, ensuring there are no squeaks or rattles.</p> <p>37. Place the instructions in the glove box after fitment.</p>	
---	--

Issue Date 22-02-13

Page 7

Part No: 100481-WL

Hayman Reese (Cequent)
PO Box 4050, Dandenong South VIC 3164
Phone 1800 812 017 Email info@haymanreese.com.au

www.haymanreese.com.au

