

# Install Guide

## Rear Lower Tension Link Control Arm Eye Inner Bushing Kit Jeep Grand Cherokee WK2

Z7103-N  
Page 1 of 2

**Nolathane**<sup>®</sup>

**Note:** These components must be fitted by a qualified person only, as per the manufacturers' service manual. Also, all relevant safety procedures are followed in addition to the following. Photos are an indication and may vary slightly in appearance from the actual product.

### Kit Contents:

- 2 x "5211" Bush
- 2 x 25x12.3x41.5 Crush Tube

1. Raise vehicle with a hoist for ease of installation; otherwise approved floor stands can be used.
2. Remove exhaust system up to engine header pipes.
3. Remove lower shock mount bolt. (Figure 01)



Figure 01 – Left Rear Lower Wishbone Control Arm

4. Place adjustable stand beneath cradle and loosen cradle bolts to allow cradle to drop down. (Figure 02)



Figure 02 – Cradle Bolts to be loosened.

5. Remove cradle bolts gradually each side to loosen the coil springs.
6. Undo tension link bolts to free control arm paying attention to the orientation of the arm and location of the tapered crush tubes. (Figure 03)

# Install Guide

## Rear Lower Tension Link Control Arm Eye Inner Bushing Kit Jeep Grand Cherokee WK2

**Nolathane®**



7. Remove old bushes with appropriate tools ensuring bores are not damaged in the process (e.g. reciprocating saw or booker-rod setup or pressing tools)
8. Ensure the mounting bores are clean of debris and burrs.
9. Press new polyurethane bushes into their respective eyes ensuring that the exterior steel shell sits flush with the surrounding bore. (Figure 04)

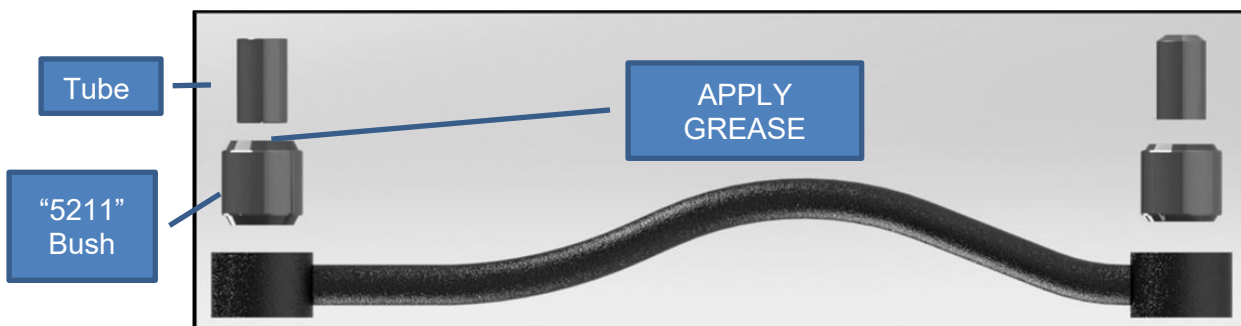


Figure 04- Right Tension Link Arm Assembly.

10. Apply supplied grease evenly to internal face of supplied bushes and push the supplied crush tubes into the bushings.
11. Reinstall tension link arms into vehicle, tighten bolts and re-attach wiring system.
12. Place coil spring appropriately and raise cradle into position.
13. Fasten cradle bolts and re-torque all nuts to manufacturer's specifications. (100 Nm for the nut)
14. Retighten all bolts after 1000km.