

# Install Guide

## Front Differential Mount Bush Kit

### – Left Side Upper Ford Ranger PX 1/2/3



**Nolathane®**

**Note:** These components must be fitted by a qualified person only, as per the manufacturers' service manual. Also, all relevant safety procedures are followed in addition to the following. Photos are an indication and may vary slightly in appearance from the actual product.

**Kit Contents:**

- 1 x 3797 Bush
- 1 x Blade Style Tube

1. With the vehicle on jack stands/hoist, support the front diff with an adjustable stand or similar, then remove bolts & the left side upper diff bracket assembly.
2. Remove the original bush with the use of a hydraulic press and suitable pressing tools.
3. Clean housing surface to remove any old original bushing materials.
4. Apply the grease supplied to the housing bore, outside and inside surfaces of the bushes and the outside of the steel crush tubes.
5. Install the new bushes according to the image beside.
6. Refit the left side upper diff bracket assembly.
7. Ensure that all fasteners are torque according to the 'General Torque Specification' table below or the manufacturer's settings.

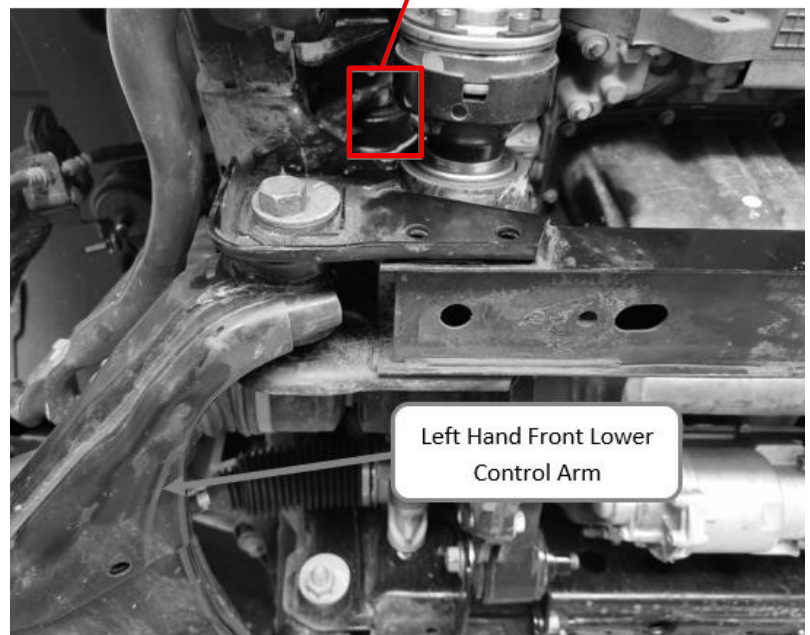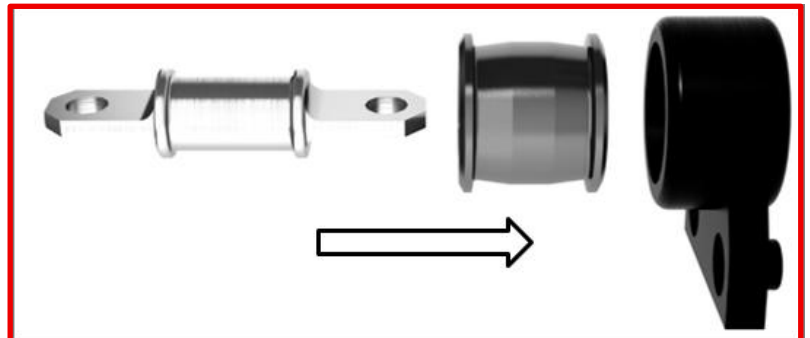

**General Torque Specification**

Size	Class 8.8				Class 10.9			
	Lubricated		Dry		Lubricated		Dry	
	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft
<b>M10</b>	43	32	55	40	63	47	80	60
<b>M12</b>	75	55	95	70	110	80	140	105
<b>M14</b>	120	88	150	110	175	130	225	165