


Fitting Instructions

Lower Control Arm

1. Support vehicle disconnect the ball joint, sway bar link rod.
2. Remove lower wishbone.
3. Press old bushings from the wishbone and inspect arm for wear or any sign of cracking. If arm is damaged - replace it.
4. Install the new bushes into arm, take care to support the arm to prevent arm blades from collapsing.

NOTE: There are 4 bushes in this kit - 2 are marked HD and must be fitted to the eye that faces forward when the wishbone is installed in the vehicle. (Refer to drawing).

5. Lubricate end faces of bushes with grease provided before reinstalling wishbone.
6. Reassemble suspension as recommended in the workshop manual.
7. Tighten all components to manufactures recommended torque settings.

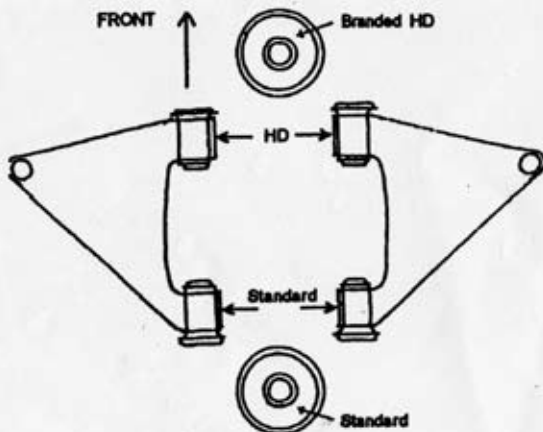

NOTE: IT IS RECOMMENDED THAT THE ABOVE PROCEDURE IS CARRIED OUT BY A LICENCED WORKSHOP OR TRADESPERSON