

Install Guide

Radius Arm to Chassis Mount Kit

Toyota Landcruiser

80/105/74/76/78/79 Series


Z7088-N
Page 1 of 1

Nolathane®

Note: These components must be fitted by a qualified person only, as per the manufacturers' service manual. Also, all relevant safety procedures are followed in addition to the following. Photos are an indication and may vary slightly in appearance from the actual product.

Kit Contents:

- 2 x 0440 Bush
- 2 x 28.57x18x60 Steel Offset Tube

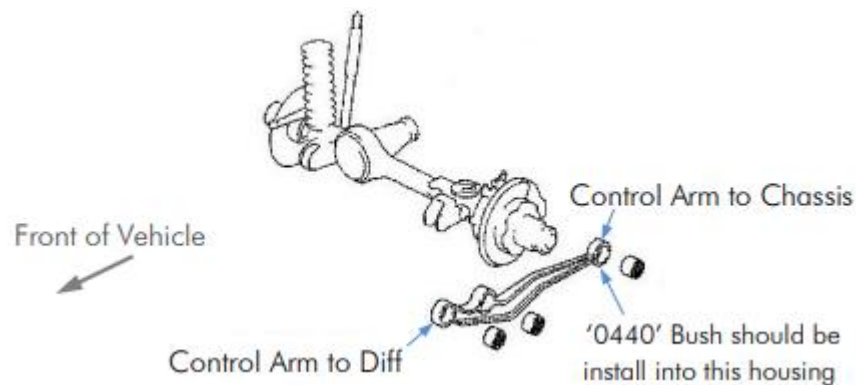

1. Jack the vehicle up and put on stands/hoist.
2. The radius arm can be removed with the vehicle at ride height and on the ground as long as only one trailing arm is removed at a time and a bottle jack or similar is used to stop the differential from twisting.
3. Remove the front radius arm. It may be necessary to loosen the nuts on both side arms.
4. With the use of a hydraulic press and suitable pressing tools, press out the factory rubber bush including the shell.
5. Clean and remove any burrs in the housing area.
6. Grease up the new polyurethane bush and press it into the housing. When fitting the crush tube, apply the grease on the outside of the steel crush tube and the bore of the bush, then align the bore of the tube as per figure below and press it in.
7. Wipe off any excess grease and refit the arm in the reverse order of removal, repeat the procedure for the other arm and recheck and record the wheel alignment figures.

Up to 8mm set back achievable

