


Fitting Instructions #Z7059-N

Nissan X-Trail / Dualis / QASHQAI / Rogue – Renault Koleos

Rear Trailing Arm Front Bushing

Nolathane®

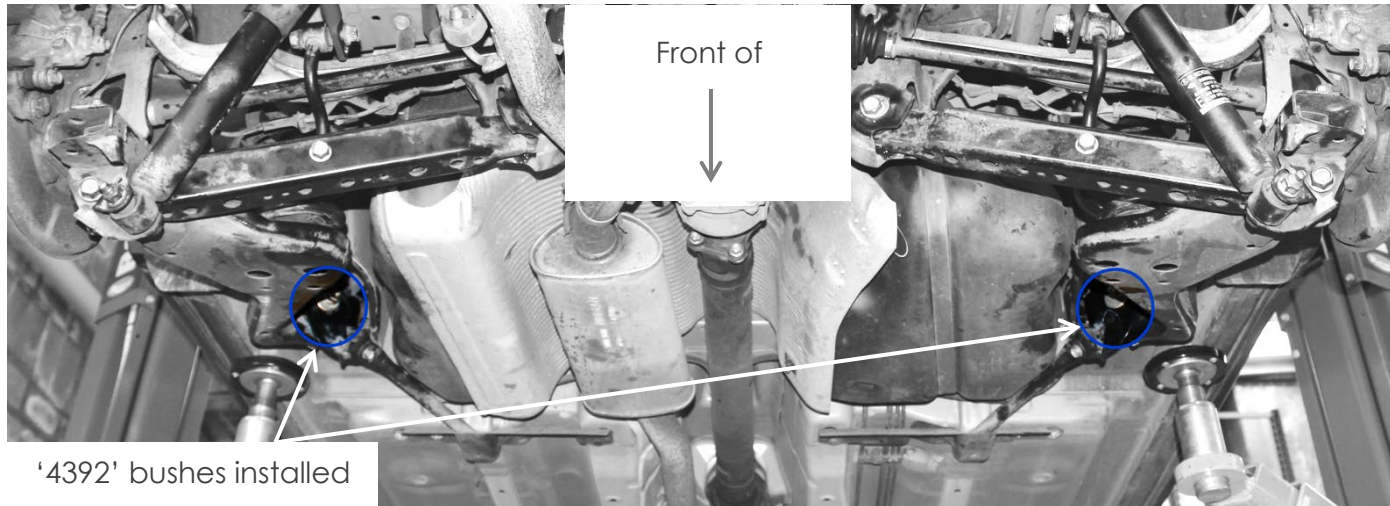

Note: Polyurethane bushings must be fitted to both sides of the vehicle.

- Wheel-align the vehicle before the job is started and note settings;
- With the vehicle on hoist, remove the rear trailing arms;
- With the use of a hydraulic press and suitable pressing tool, remove the factory bushes including the steel shell;
- Clean housing areas to remove any old original bushing materials;
- Apply grease on the O.D. surface of the bushes and on the I.D. surface of the housing;
- Using the appropriate pressing tools, support the control arm and press in the new bushes according to the figure;
- Apply the grease supplied to the bore of the bush and the outside of the steel crush tubes;
- Refit the rear trailing arms to the car and tighten the bolts;
- Ensure that all fasteners are torque to manufacturer's specification and carry out a wheel

