

# Fitting instruction

## Radius Rod to Control Arm Bushes


### Ford Falcon, Fairlane, LTD

### Suits 11/87-7/98 EA/NA/DA - EL/NL/DL

**N.B:** These instructions should be used in conjunction with workshop manual.

**N.B:** This kit contains bushes with bonded washers for added strength, thus eliminating the risk of damage caused to the flange under heavy braking.

1. Raise the front of the vehicle and support on chassis stands.
2. Remove the front wheels from the vehicle.
3. Undo the front and rear nuts and washers from both ends of the radius rod and remove from the vehicle.
4. Remove old bushes from the control arm.
5. Clean and remove any rubber deposits and inspect control arm for damage repair or replace if necessary.
6. Lubricate end faces and internal bore only of the bushes with grease provided, before assembly.
7. Re-use original washers and nuts and refit new bushes to the control arm making sure to fit them the correct way (see diagram below).
8. Tighten all components to manufacturers recommended torque settings.
9. Wheel align vehicle.

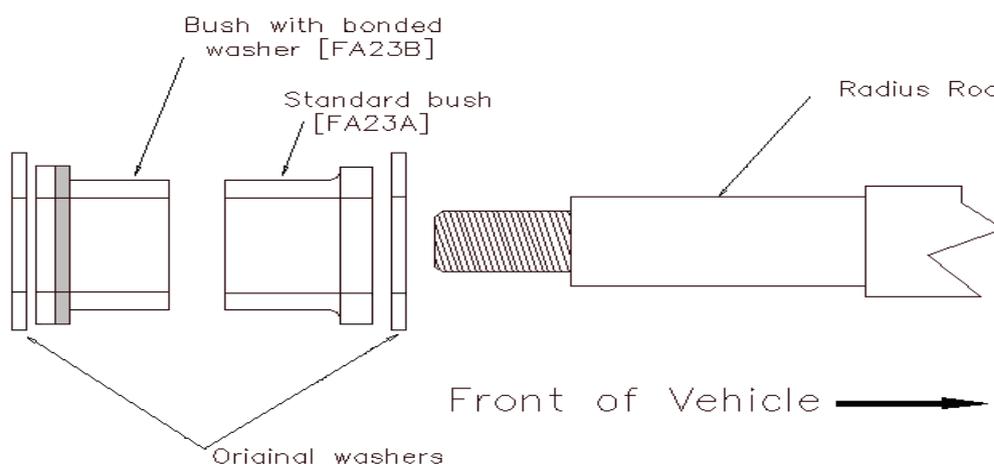

**NB:** It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual procedures are followed in addition to the above.