


Instruction Sheet

Lower Inner Rear bush

Z5184



Suits: BMW 3 Series E46, 316, 318, 320, 323, 325, 328, 330 and M3

N.B: This instruction sheet should be used in conjunction with the workshop manual

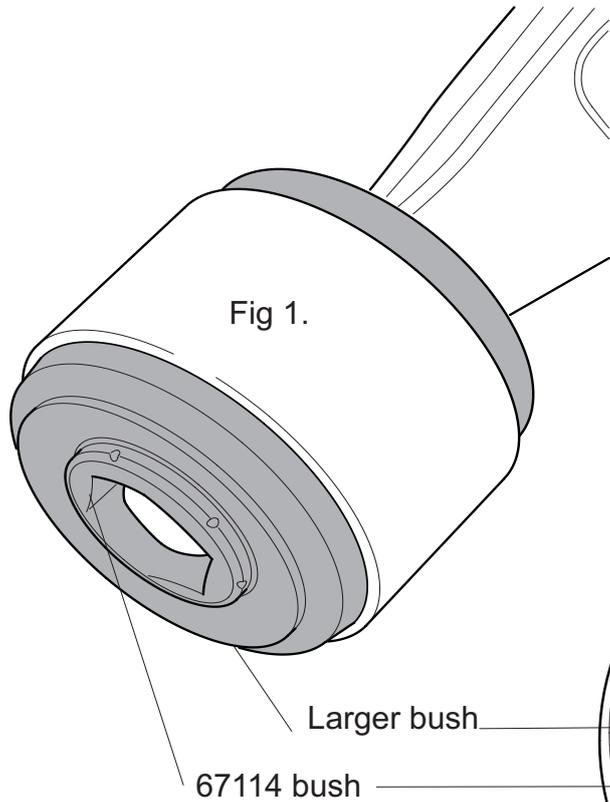

1. Raise the vehicle on a hoist or jack and secure with safety stands. Remove the front control arms.

2. Remove the OE bush from the alloy bracket and press the supplied larger bush back into housing as per Fig 3. Note: The larger internal step is to be situated closest to the alloy arm.

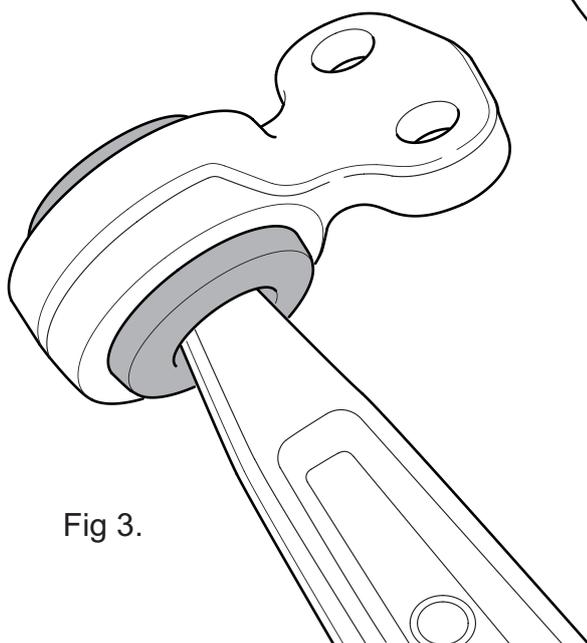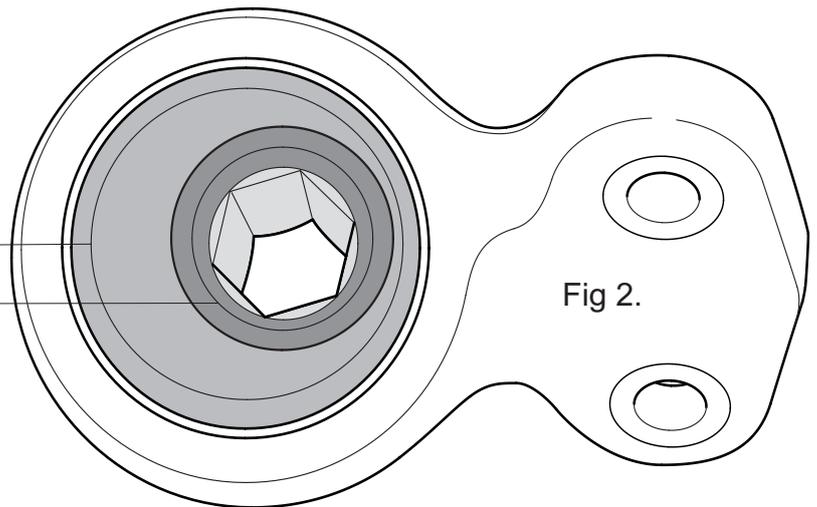

3. Offset bush to be installed as per Fig 2.

4. Slide bush 67114 onto the arm with the larger flange situated closest to the alloy arm.

5. Grease the ID of the larger bush and then slide over bush 67114.

6. Refit the arms to the vehicle and carry out a wheel alignment.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.