

# Installation Guide

## Front Upper Inner Inserts


Z5052

Suits: Ford Falcon FG Series

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.

### View of one of the upper arm eyelet's

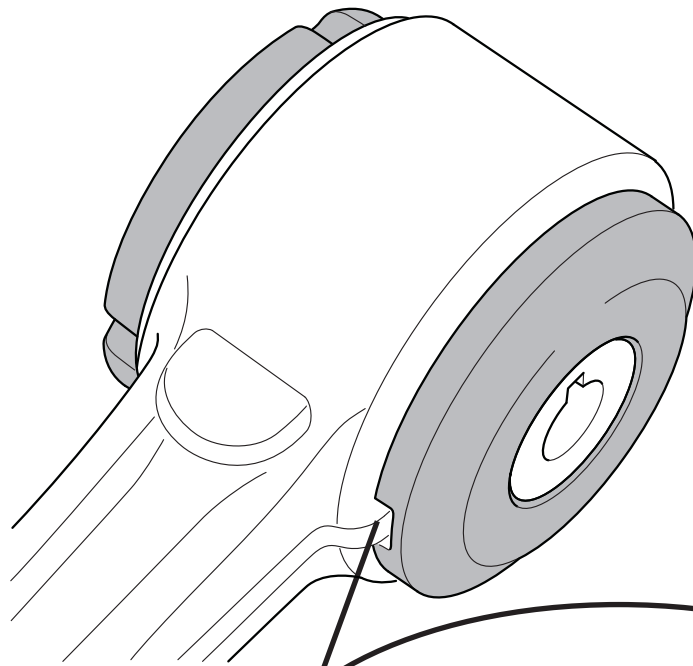

Install 67056 insert so that the recess fits over the aluminium casting on the arm.

1. Remove upper arm bolts from the vehicle and with the arm pulled away from the brackets clean and ensure the bushes and brackets are free from dirt.
2. Apply liberal amounts of grease supplied in the kit to both running surfaces of the bush and install the inserts into the original bush.
3. Re-fit the arm back into the brackets, and re-torque bolts to manufacturers specifications.

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.