

# Installation Guide Rear Control Arm

Z 5156

Suits: Nissan Pathfinder R51 7/05 -

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.

- 1.Raise the vehicle and remove the rear lower control arm.
- 2.Once the arm is removed you will notice locating dowels on the inside of the chassis mounting point. These will need to be removed with a grinding tool or file, refer fig 1.
- 3.Ensure that this area is now flat and clean and the polyurethane bush face is well greased. Refer fig 2.
- 4.The supplied washers will need to be installed between the bush face and mounting point.

Fig 1.


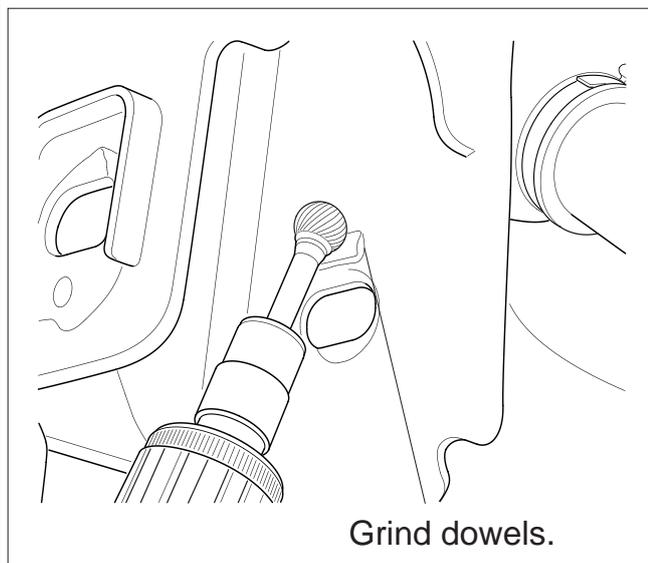


Fig 2.

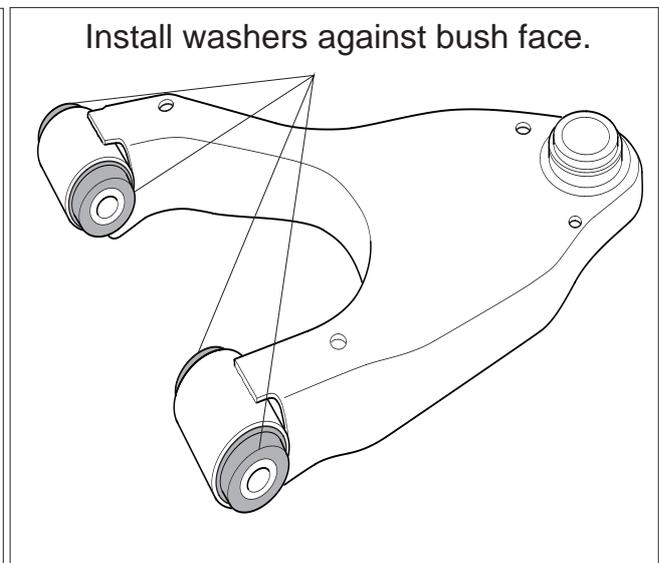

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.