

Installation Guide


Front Lower Control Arm Bushings

Z5268

Suits: HONDA CRV 97- ON

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.

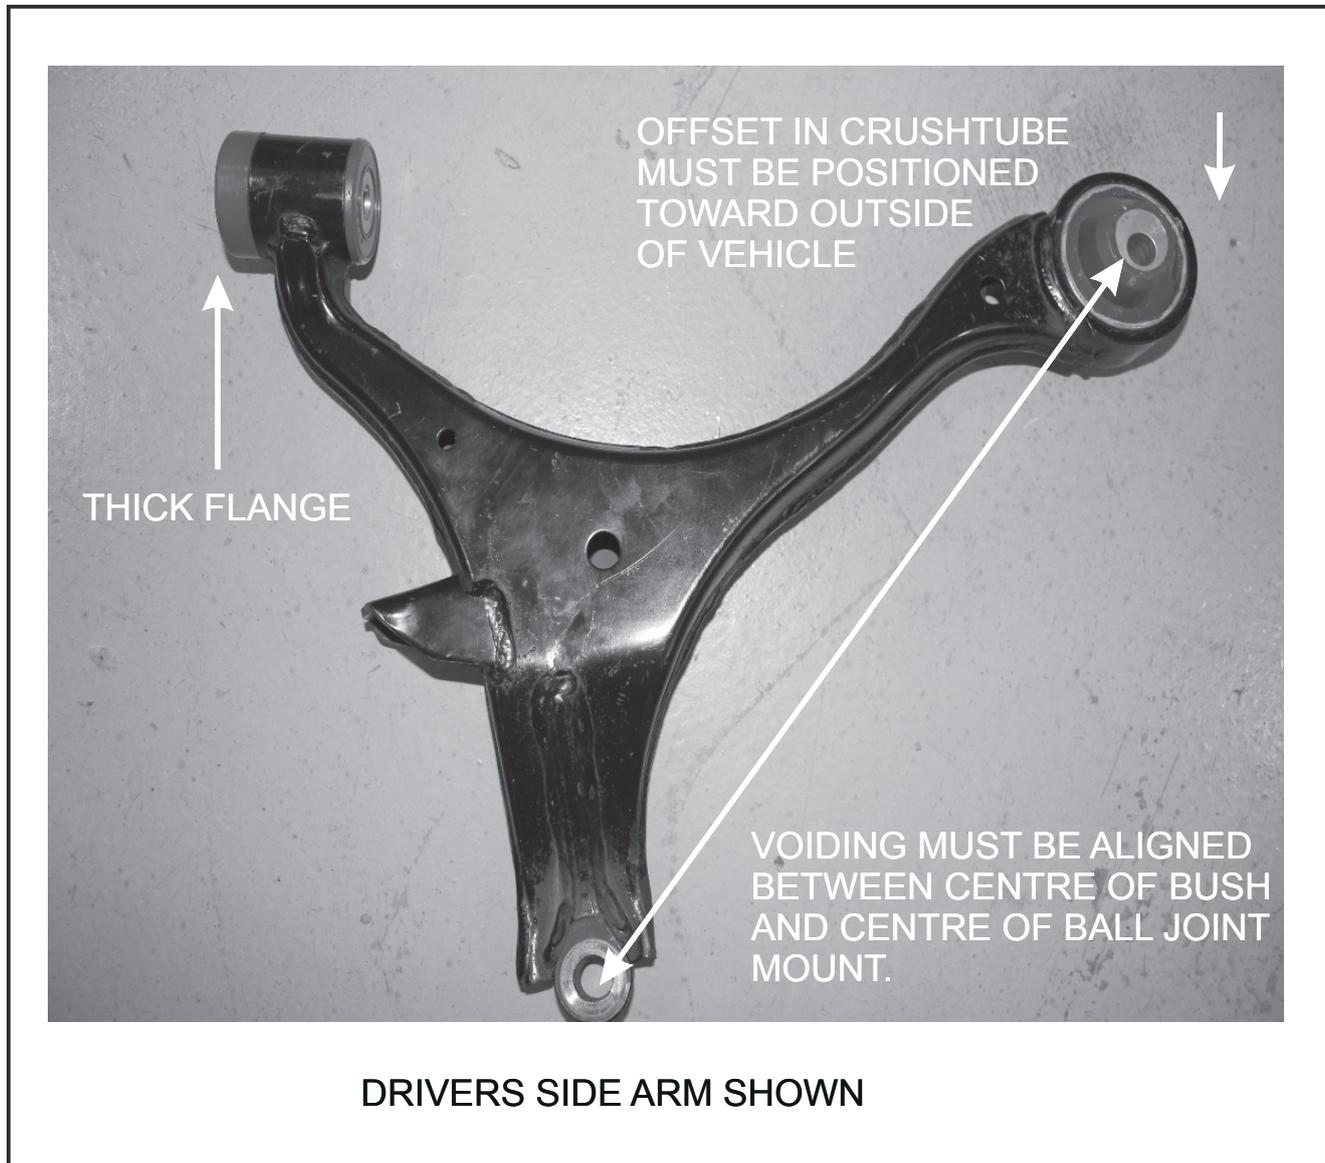

- Align voiding between centre of bushing and ball joint mount as shown.
- Offset in crushtube set toward outside of vehicle as shown.
- Insert thin flange bushing into front of rear eye as shown.
- Insert thick flange bushing into rear of rear eye as shown.
- Generously grease I.D. of bushings before inserting crushtube.
- Before installing into vehicle generously grease flange face of bushings.

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.