


# Fitting Instructions

## Control Arm Bushes Front

1. Support vehicle and disconnect upper ball joint.
2. Remove upper suspension
3. Press out shelled bushes from eyes in the arm.
4. Fit shelled bushes and press to **swage mark** on bush shank  
**Take care to support the arm around each eye to minimise damage to arms.**
5. Lubricate end faces of bushes with grease provided.
6. Reassemble suspension as recommended in workshop manual.
7. Tighten all components to manufactures recommended torque settings.

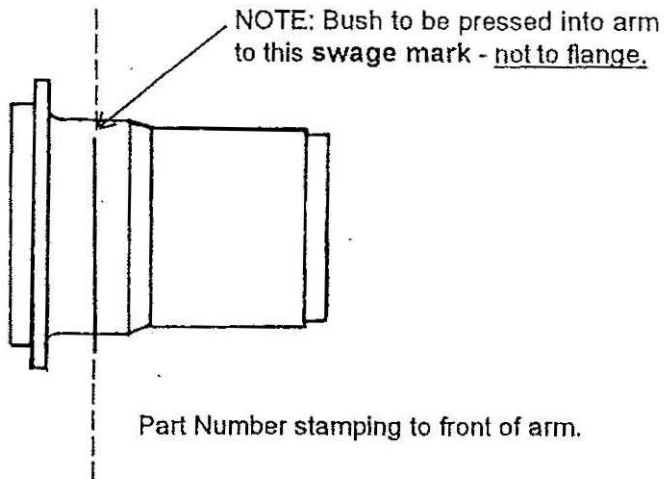


**NOTE: IT IS RECOMMENDED THAT THE ABOVE PROCEDURE IS CARRIED OUT BY A LICENCED WORKSHOP OR TRADESPERSON**

# Fitting Instructions

## Control Arm Bushes Front

1. Support vehicle and disconnect upper ball joint.
2. Remove upper suspension
3. Press out shelled bushes from eyes in the arm.
4. Fit shelled bushes and press to **swage mark** on bush shank  
**Take care to support the arm around each eye to minimise damage to arms.**
5. Lubricate end faces of bushes with grease provided.
6. Reassemble suspension as recommended in workshop manual.
7. Tighten all components to manufactures recommended torque settings.

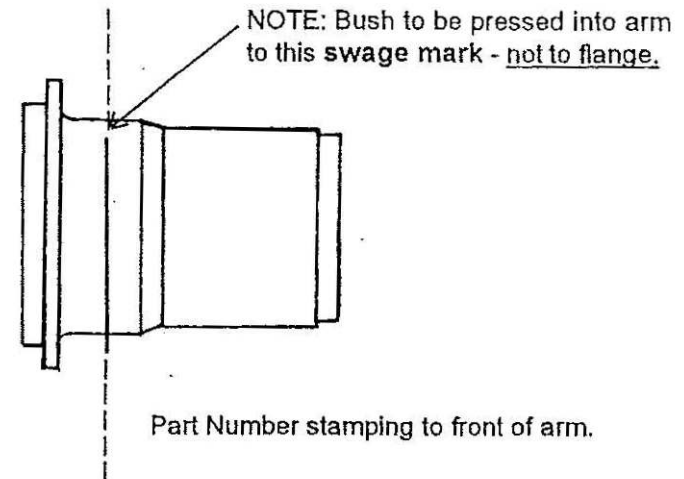

**NOTE: IT IS RECOMMENDED THAT THE ABOVE PROCEDURE IS CARRIED OUT BY A LICENCED WORKSHOP OR TRADESPERSON**