


FITTING INSTRUCTIONS

Suits: EF-EL / NF-NL / DL-XH.

Fairlane, LTD, Wagon, Van & Ute

N.B: These instructions should be used in conjunction with workshop manual.

1. Raise the front of the vehicle and place on chassis stands.
2. Remove the front wheels.
3. Remove the front radius rod retaining nut.
4. Remove the radius rod to lower control arm retaining nut.
5. Remove the radius rod from the vehicle.
6. Remove the bushes from the chassis eyelet and discard the old bushes only.
Note: THE ORIGINAL FRONT WASHERS MUST BE RE-USED.
7. Fit the tapered 8151 replacement bush in the front most position and the 8151B replacement bush with the supplied washer to the rear most position in the chassis eyelet.
Note: Only grease the inner bore of the bushes, crush tube outer and flange faces.
8. Refit the radius rod with the original washer in place as per diagram below.
9. Refit all removed locking nuts and washers.
10. Tension all removed parts to manufactures specifications at vehicle ride height.
11. We recommend a wheel alignment be carried out after completing this procedure.

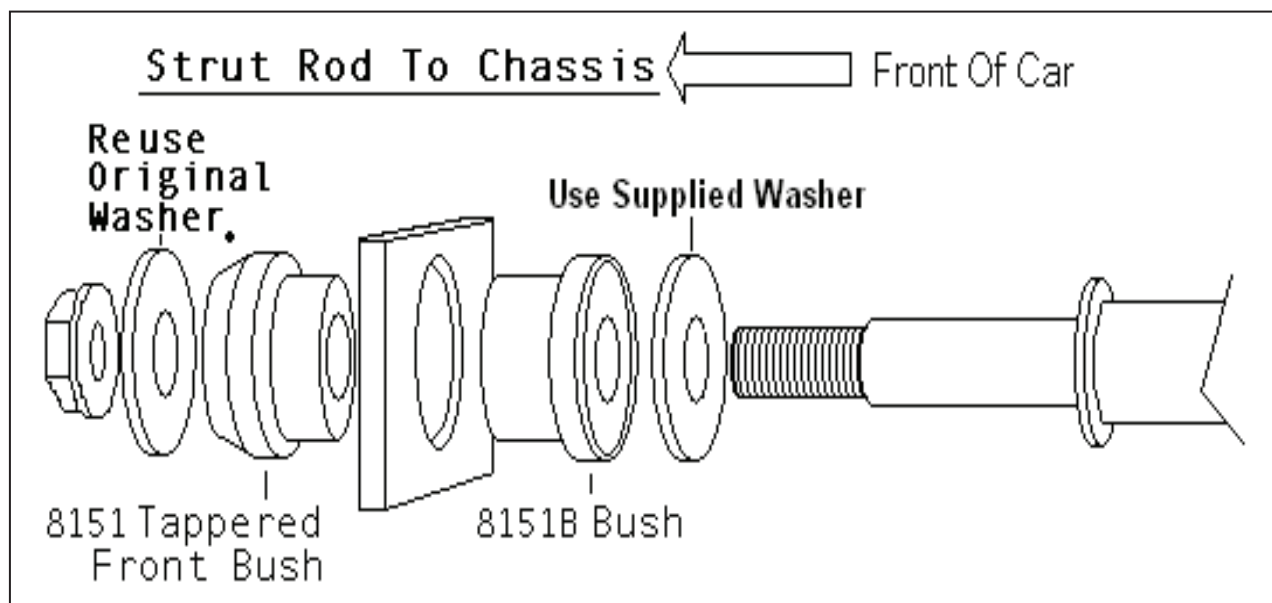

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.