

Instructions

Pan-hard Rod Bushings



Application - Jeep Wrangler
- 2007-2018

(Refer current catalogue for complete listing)

- Raise vehicle evenly and safely support.

**This job is best done while vehicle is at ride height
On ramps or 4-post hoist**

Contents - Bushing 92054 x2
- Steel tube 22x14x40.5 x2
- Grease


N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Proceed to un-bolt Pan-hard Rod.
- A Press will be required to remove the original bushing
Press out old bushing including steel outer shell.

**Note - these bushings are to suit 39mm
size Panhard Rod internal hole diameters.
Refer catalogue for other sizes**

- Grease bushing internal diameter and
side face with supplied grease only.

- Push in supplied tube
and re-fit Rod to
vehicle.

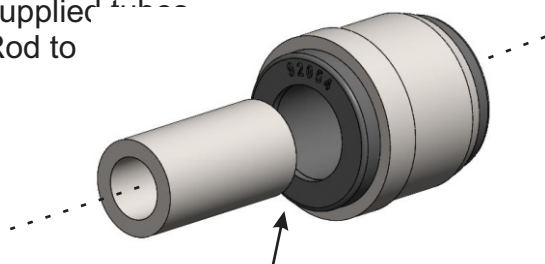

Grease bushing ID and side face



Upper chassis bolt



Lower Differential bolt

- During install of Pan-hard Rod, you may have to push the body sideways to then push bolts back in.

- Road test vehicle.

- Re-check all bolts after 100kms travelled,

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.