

## FITTING INSTRUCTIONS


### Suits: Holden Commodore VB-VZ 2WD models only Strut Bar to Lower Control Arm Bush Kit.

#### Kit Contents

HO75A Bushes	x 2	Crush Tubes	x 2
HO75B Bushes	x 2	Grease satchel	x 1

**N.B:** These instructions should be used in conjunction with workshop manual.

1. Raise front of vehicle, support on jack stands and remove front wheels.
2. Remove lower control arm inner bolt, remove the sway bar link rod, drop down control arm and remove old bushes using a suitable removal tool.
3. Clean and inspect the arm, where the new bushes are to be fitted for rust, paint, damage, pitting and old rubber deposits and clean or replace as necessary.
4. Insert new replacement bushes and crush tubes as per diagram. (Paying particular attention to bush part number and location.)
5. Refit all removed parts and re-tension suspension as per workshop manual specifications.

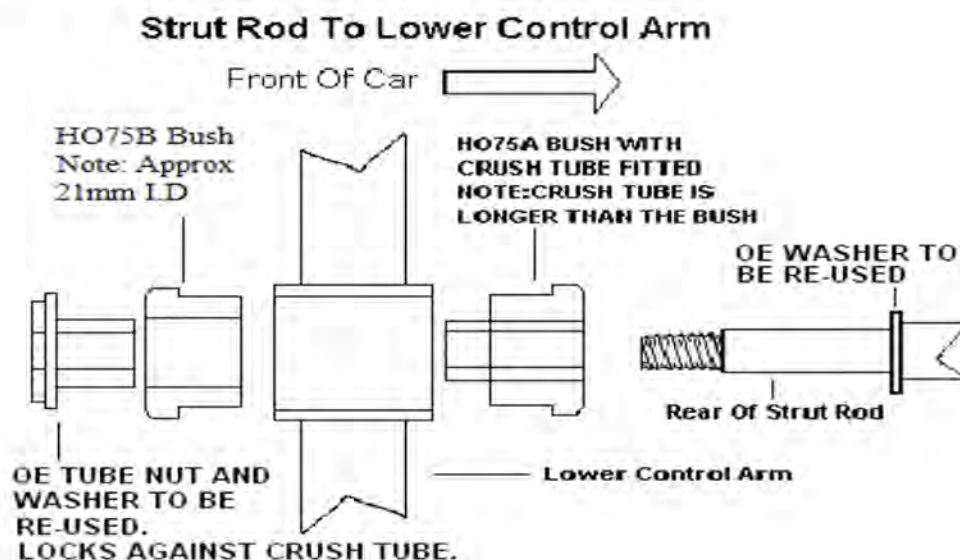

**N.B:** It is recommended that a licenced workshop or trades person Carry out the above procedures and that workshop manual and Relevant safety procedures are followed in addition to the above.